


H-TAG

Access Controller / Reader

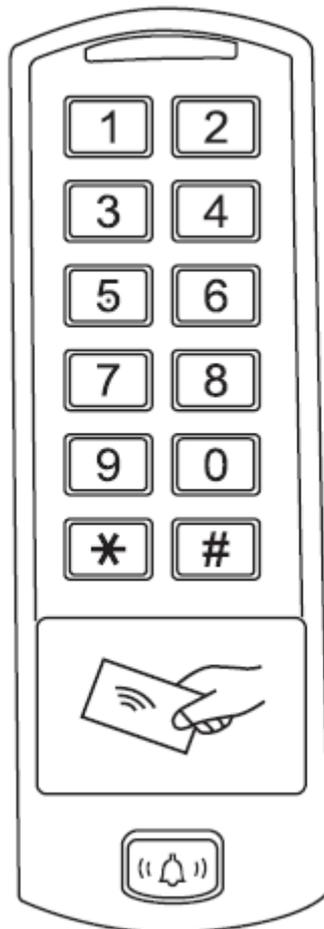

User Manual



www.holars.no - www.holars.se

CONTENTS

INTRODUCTION	2
INSTALLATION	4
STANDALONE MODE	6
CONTROLLER MODE	11
WIEGAND READER MODE	13
ADVANCE APPLICATION	14

INTRODUCTION

The H-TAG is a single door multifunction standalone access controller or a Wiegand output reader. It uses Atmel MCU assuring stable performance. The operation is very user-friendly, and low-power

circuit makes it long service life.

The H-TAG supports 600 users, it supports multi access modes in either card access, PIN access, Card + PIN access, or multi cards/PINsaccess. It has extra features including block enrollment, interlocked, Wiegand 26~37 bits interface...etc.

Features

One relay, keyboard programmer

600 users

PIN length: 4~6 digits

Card type: 125KHz EM card, 125KHz HID card, 13.56MHz Mifare card

Wiegand 26~37 bits input & output

Can be used as Wiegand reader with LED & Buzzer output

Card block enrolment

Tri-colour LED status display

Pulse mode, Toggle mode

2 devices can be interlocked for 2 doors

Built in light dependent resistor (LDR) for anti tamper


Backlit keypad

Waterproof, conforms to IP66

Low temperature resistance(-40°C)

User Capacity Common Users Panic Users	600 598 2
Operating Voltage Idle Current Active Current	12~28V AC/ DC < 65MA < 100MA
Proximity Card Reader Radio Technology Read Range	Hid & EM & Mifare 125KHz & 13.56Mhz 2~6 cm
Wiring Connections	Relay output, exit button, alarm, door contact, Wiegand input, Wiegand output
Relay Adjustable Relay Output Time Lock Output Load	One (NO, NC, Common) 1~99 Seconds (5 seconds default) 2 Amp Maximum
Wiegand Interface Wiegand Input Wiegand Output PIN Output	Wiegand 26~37bits 26~37bits 26~37bits 4 bits, 8 bits(ASCII), 10 digits Virtual Number
Environment Operating Temperature Operating Humidity	Meets IP66 -40 °C ~ 60 °C (-40 °F ~ 140 °F) 0%RH ~ 98%RH
Physical Color Dimensions Unit Weight Shipping Weight	Zinc-Alloy Enclosure Powder Coat L150xW51xH23mm 500g 650g

Carton Inventory

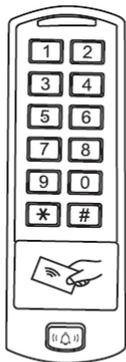

H-TAG Access Controller



Diode 1N4004 (For relay circuit protection)




Self Tapping Screws




Wall Anchors



Screw Driver

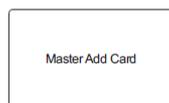

Master Add Card

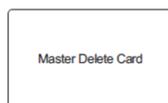


Master Delete Card

Master Cards

INSTALLATION

- Remove the back cover from the unit
- Drill 2 holes(A,C) on the wall for the screws and one hole for the cable
- Knock the supplied rubber bungs to the screw holes(A,C)
- Fix the back cover firmly on the wall with 4 flat head screws
- Thread the cable through the cable hole(B)
- Attach the unit to the back cover

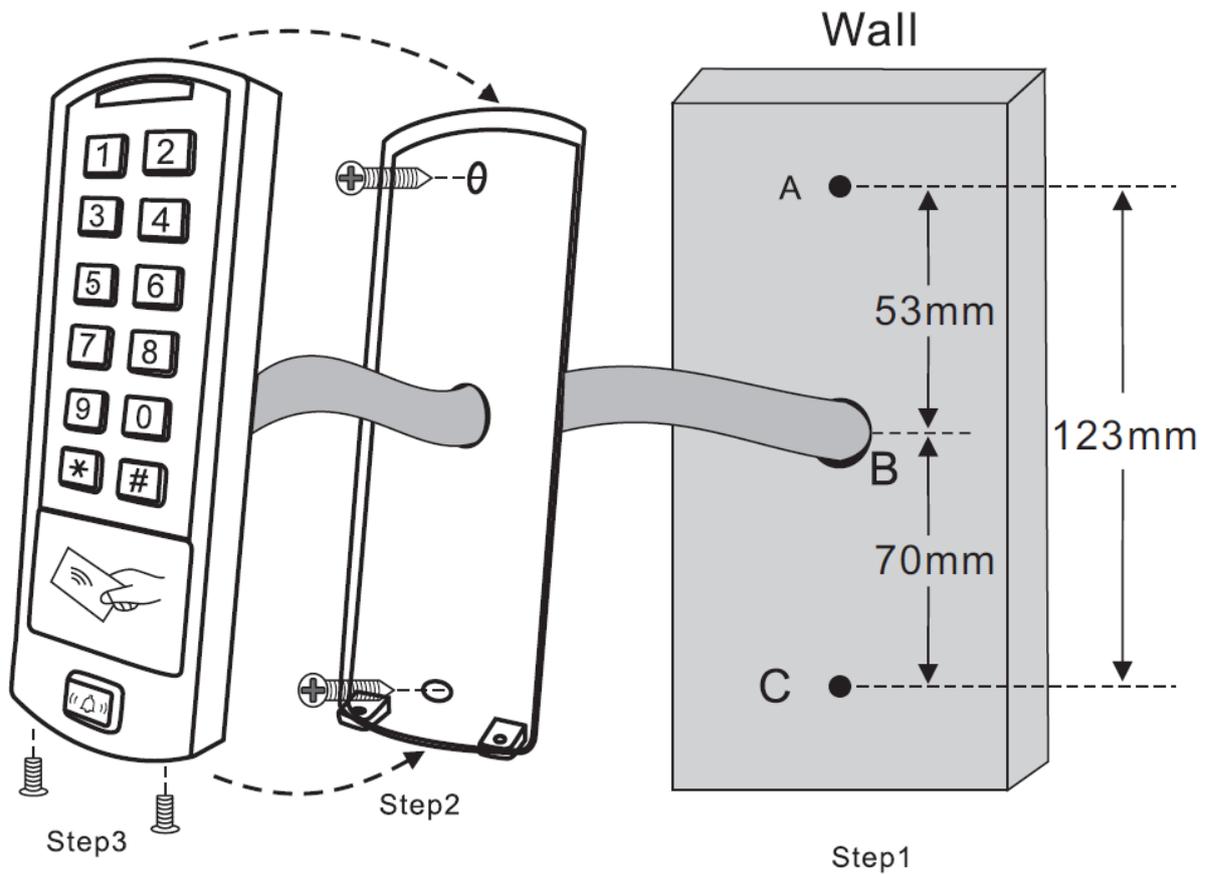

Wiring

Wire Color	Function	Notes
Basic Standalone Wiring		
Red	AC & DC	12-28V AC/DC Power Input
Grey & Black	AC & DC	12-28V AC/DC Power Input
Black	GND	Negative Pole
Blue	Relay NO	Normally Open Relay Output
White & Black	Relay Common	Common Connection for Relay Output
Green & Black	Relay NC	Normally Closed Relay Output
Yellow	OPEN	Request to Exit(REX) Input
Pass-Through Wiring (Wiegand Reader or Controller)		

Green	Data 0	Wiegand Input/Output Data 0
White	Data 1	Wiegand Input/Output Data 1
Advanced Input and Output Features		
Grey	Alarm Output	Negative contact for Alarm
Brown	Contact Input	Door/Gate Contact Input (Normally Closed)
Brown & Black	Door Bell A	Contact for Door Bell
Yellow & Black	Door Bell B	Contact for Door Bell

Sound and Light Indication

Operation Status	LED	Buzzer
Stand by	Red light bright	-
Enter into programming mode	Red light shines	One beep
In the programming mode	Orange light bright	One beep
Operation error	-	Three beeps
Exit from the programming mode	Red light bright	One beep
Open lock	Green light bright	One beep
Alarm	Red light Shines quickly	Beeps

Basic Configure

Enter and Exit Program mode

Programming Step	Keystroke Combination
Enter Program Mode	* (Master Code) # (Factory default is 123456)
Exit Program Mode	*

Set Master Code

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Update Master Code	0 (New Master Code) # (Repeat New Master Code) # (Master code is any 6 digits)
3. Exit Program Mode	*

Set the Working Mode

Notes: the H-TAG has 3 working modes: Standalone Mode, Controller Mode, Wiegand Reader Mode, choose the mode you use. (Factory default is Standalone Mode / Controller Mode)


Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Standalone/Controller Mode	8 0 # (Factory default)
OR 2. Wiegand Reader Mode	8 1 #
3. Exit	*

STANDALONE MODE


H-TAG can be worked as Standalone Reader for single door. (Factory default mode)---8 0 #


Connection Diagram

Common Power Supply:

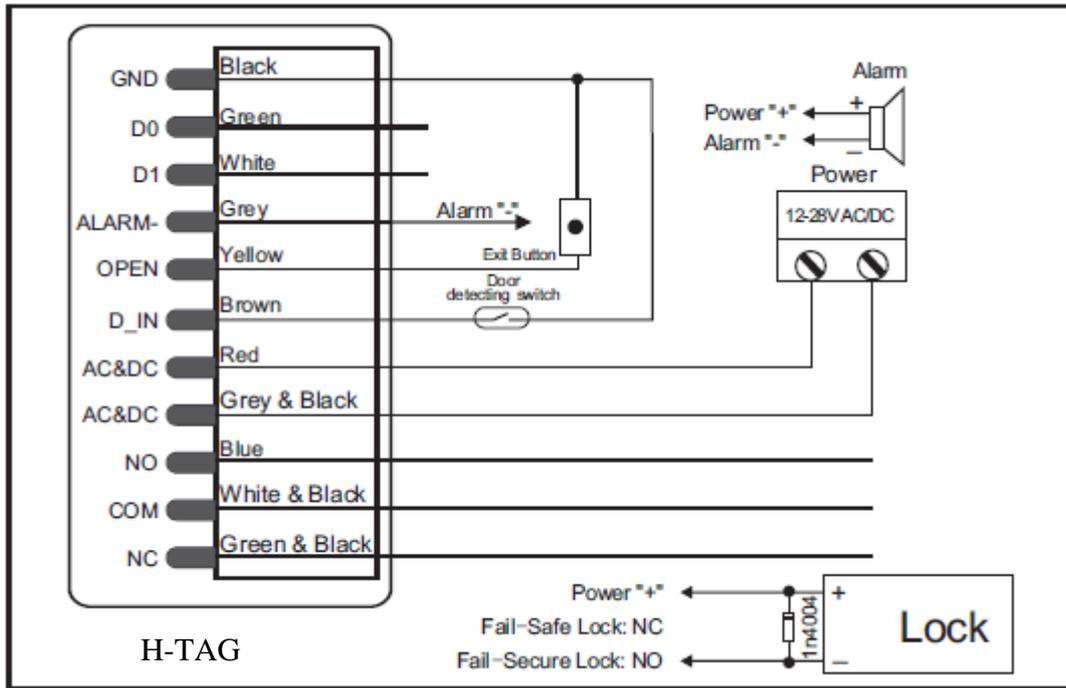

Access Control Power Supply:

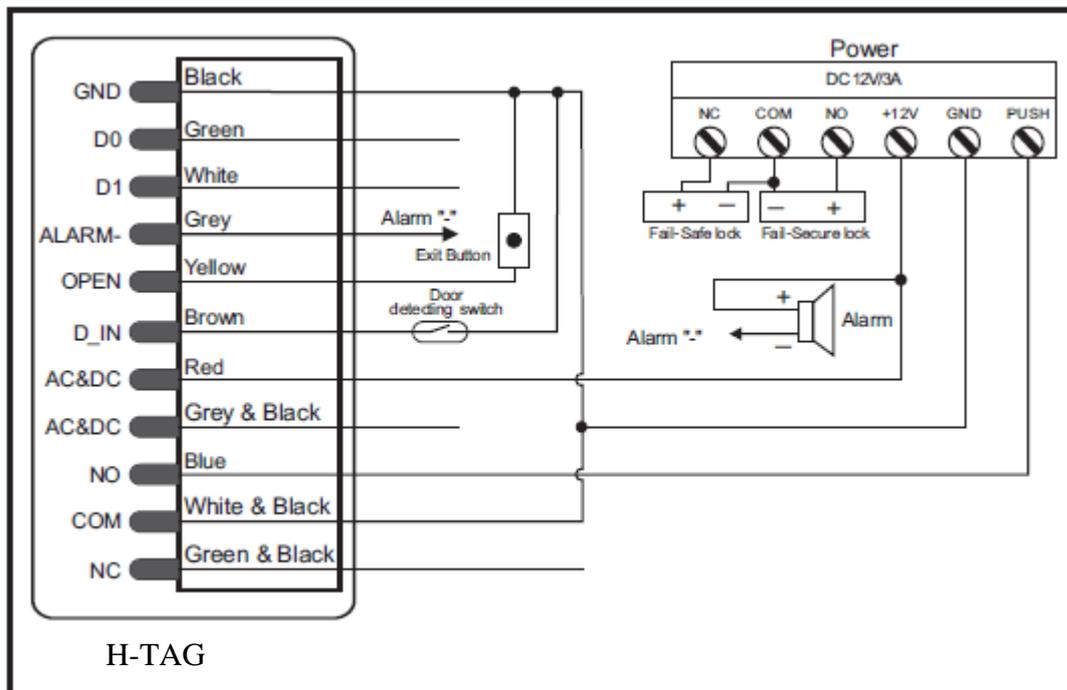

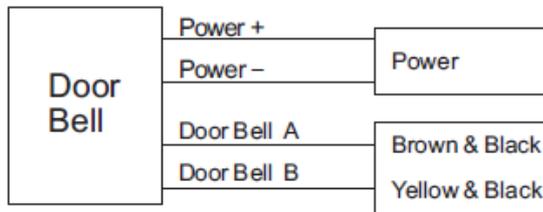

Attention:

Install a 1N4004 or equivalent diode is needed when use a common power supply, or the keypad might be damaged.(1N4004 is included in the packing)

Programming

Programming will vary depending on access configuration. Follow the instructions according to your access configuration.

Notes:

- **User ID number:** Assign a user ID to the access card / PIN in order to track it. The common user ID number can be any number fom 0~597, the panic user ID is from 598~599.
IMPORTANT: User IDs do not have to be proceeded with any leading zeros. Recording of User ID is critical. Modifications to the user require the User ID be available.
- **Proximity Card:** Any 125KHz industry standard 26 bits HID and EM cards and 13.56MHz mifare card
- **PIN:** Can be any 4~6 digits except 8888 which is reserved.

Add Common Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Add Card User	
2. Add Card: Using Auto ID (Allows H-TAG to assign Card to next available User ID number) OR 2. Add Card: Select Specific ID (Allows Master to define a specific User ID to associate the card to) OR 2. Add Card: by Card Number OR 2. Add Card: Block Enrolment (Allows Master to add up to 598 cards to the Reader in a single step) Takes 2 minutes to program.	1 (Read Card) # The cards can be added continuously. 1 (User ID) # (Read Card) # <i>(User ID is any number from 0-597)</i> 1 (Input 8/10 digits Card number) # 1 (User ID) # (Card quantity) # (The first card number) # Cards' number must be consecutive; Card quantity = number of cards to be enrolled.
Add PIN User	
2. Add PIN: Using Auto ID (Allows H-TAG to assign PIN to next available User ID number)	1 (PIN) # The PINs can be added continuously. <i>(PIN: 4~6 digits)</i>
2. Add PIN: Select Specific ID (Allows manager to define a specific User ID to associate the PIN to)	1 (User ID) # (PIN) # The user ID is any number from 0-597
3. Exit	*

Add Panic Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Add Card: OR 2. Add PIN:	1 (User ID) # (Read Card / Input 8/10 digits Card number) # 1 (User ID) # (PIN) # (User ID is any number from 598~599)
3. Exit	*

Change PIN Users

Programming Step	Keystroke Combination
Note: Below is done outside programming mode, users can undertake this themselves	
2. Change PIN: By Card (There will auto allocate PIN(8888) to cards when adding)	* (Read Card) (Old PIN) # (New PIN) # (Repeat New PIN) #
2. Change PIN: By PIN	* (User ID) # (Old PIN) # (New PIN) # (Repeat New PIN) #
3. Exit	*

Delete Users

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
Delete Card User - Common	
2. Delete Card - By Card OR 2. Delete Card - By ID number OR 2. Delete User - By Card number	2 (Read Card) # The cards can be deleted continuously. 2 (User ID) # 2 (Input 8/10 digits Card number) #
Delete PIN User - Common	
2. Delete PIN – by PIN OR 2. Delete PIN – By ID number	2 (Input PIN) # 2 (User ID) #
Delete Panic User	
2. Delete Panic Card User OR 2. Delete Panic PIN User	2 (User ID) # 2 (User ID) #
Delete All Users	
Delete All User	2 (Master Code) #
3. Exit	*

Set Relay Configuration

The relay configuration sets the behaviour of the output relay on activation.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Pulse Mode OR	3 (1-99) # (factory default) The relay time is 1-99 seconds. (1 is 50mS.) (Default is 5 seconds)
2. Toggle Mode	3 0 # Sets the relay to ON/OFF Toggle mode
3. Exit	*

Set Access Mode

For Multi cards/ PINs access mode, the interval time of reading cards/inputting PINs can not exceed 5 seconds, or else, the H-TAG will exit to standby automatically.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Card access OR	4 0 #
2. Card + PIN access OR	4 1 #
2. Card or PIN access OR	4 2 #
2. Multi cards /PINs access	4 3 (2~9) # (Only after reading 2~9 cards or inputting 2~9 PINs, the door can be opened)
3. Exit	*

Door Detecting

Door Open Too Long (DOTL) warning. When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened normally, but not closed after 1 minute, the inside buzzer will beep automatically to remind people to close the door and continue for 1 minute before switching off automatically.

Door Forced Open warning. When used with an optional magnetic contact or built-in magnetic contact of the lock, if the door is opened by force, or if the door is opened after 60 seconds of the electro-mechanical lock not closed properly, the inside buzzer and alarm output will both operate. Enter Master code # or valid user card /PIN to silence

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. To disable door open detection OR	5 0 # (factory default)
2. To enable door open detection	5 1 #
3. Exit	*

Set Strike-out Alarm

The strike-out alarm will engage after 10 failed card attempts (Factory is OFF). It can be set to deny access for 10 minutes after engaging or disengage only after entering a valid card/PIN or Master code.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Strike-Out OFF OR 2. Strike-Out ON OR 2. Strike-Out ON (Alarm)	6 0 # (factory default) 6 1 # Access will be denied for 10 minutes 6 2 #
3. Exit	*

Set Audible and Visual Response

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Control Sounds OR 2. Control LED OR 2. Control Keypad Backlit	OFF = 7 0 # ON = 7 1 # OFF = 7 2# ON = 7 3 # OFF = 7 4 # ON = 7 5 # <i>(factory defaults are ON)</i>
3. Exit	*

Master Cards Usage

Using Master Cards to add and delete card / PIN users	
Add a User	1. (Read Master Add Card) 2. (Read User Card) / (Input User PIN #) <i>Repeat Step 2 for additional user cards / PINs</i> 3. (Read Master Add Card)
Delete a User	1. (Read Master Delete Card) 2. (Read User Card) / (Input User PIN #) <i>Repeat Step 2 for additional user cards/ PINs</i> 3. (Read Master Delete Card)

Users Operation & Reset to Factory Default

- Open the door: Read valid user card or inputting valid user PIN
- Remove Alarm: Read valid user card or inputting valid user PIN, or input Master Code #
- **To reset to factory default & Add Master Cards:** power off, press the exit button, hold it and power on, there will be two beeps, and the LED light turns into yellow, release the exit button, then read any two cards (can be 125KHz EM card, 125KHz HID card or 13.56MHz Mifare card, the LED will turn into red, means reset to factory defaults successfully. Of the two cards reading, the 1st one is Master Add Card, the 2nd one is the Master Delete Card.

Remarks:

- ① If no Master Cards added, must press the Exit Button for at least 10 seconds before release.
- ② Reset to factory default, the user's information is still retained.

H-TAG Connected with Fingerprint Reader:

For example:

Connect F2 as the fingerprint reader to H-TAG, it is of two steps to enroll the valid fingerprint.

Step 1: Add the Fingerprint (A) on F2

Step 2: Add the same Fingerprint(A) on H-TAG:

1.	Enter Program Mode : * (Master Code) #
2.	1 (Press Fingerprint A once on F2) # (ID auto allocated)
OR	
2.	1 (User ID) # (Press Fingerprint A on F2) # (Select specific ID)
3.	Exit: *

H-TAG Connected with Keypad Reader:

The keypad reader can be 4 Bits, 8 Bits (ASCII), or 10 Bits output format.

Choose the below operation according to the PIN output format of your reader.

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. PIN input bits	8 (4 or 8 or 10) # <i>(factory default is 4bits)</i>
3. Exit	*

Remarks: 4 means 4 bits, 8 means 8 bits, 10 means 10 digits virtual number.

- **Add PIN Users:**

To add PIN users, after enter into programming mode on H-TAG, PIN(s) can be input/ added on either H-TAG controller or the external Keypad Reader.

- **Delete PIN Users:** the same way as add users.


ADVANCE APPLICATION

Interlock

The H-TAG supports the Interlock function. It is of two keypads for two doors, and mainly used for banks, prisons, and other places where a higher level security is required.

Connection Diagram:

Connection Diagram:

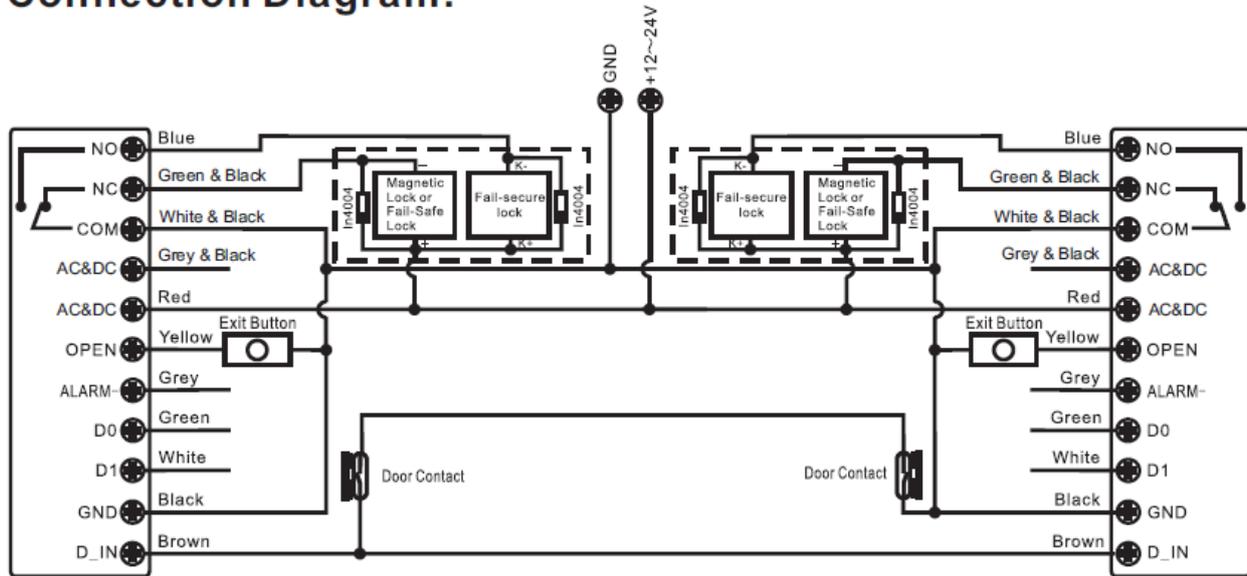

H-TAG

H-TAG

Remarks: The Door Contact must be installed and connected as the diagram.

Let's name the two H-TAG Keypads as "A" and "B" for two doors "1" and "2"

Step 1:

Enroll the users on Keypad A, then transfer the users' information to Keypad B by "User Information Transfer" function.

Step 2:

Set both of the two readers (A and B) to Interlock function

Programming Step	Keystroke Combination
1. Enter Program Mode	* (Master Code) #
2. Interlocked-OFF	9 0 # (factory default)
OR 2. Interlocked-ON	9 1 #
3. Exit	*

The interlock operation is finished,

When and only door 2 is closed, the user can read the valid card or input PIN on Reader A, door 1 will open; then when and only door 1 closed, read valid card or input PIN on Reader B, door 2 will open.

H-TAG - Simplified Instruction

Function description	Operation
Enter the programming mode	*- 123456 - # <i>then you can do the programming</i> <i>(123456 is the factory default master code)</i>
change the master code	0 – new code - # - repeat the new code - # <i>(code: 6 digits)</i>
Add card user	1- Read Card - # <i>(can add Cards continuously)</i>
Add PIN user	1- PIN - #
Delete user	2 – Read Card -# for Card user 2 – PIN -# for PIN user
Exit from the programming mode	*
How to release the door	
Card User	Read card
PIN User	Input PIN #



Sikkerhet sedan 1976

Sverige:
www.holars.se
info@holars.se
 +46(0)868409910



Sikkerhet siden 1976

Norge:
www.holars.no
info@holars.no
 +47 63961700