

**PUSH VIDEO**

# NETWORK CAMERA SERIES

## OPERATION GUIDE

Please read instructions thoroughly before operation and retain it for future reference.

## IMPORTANT SAFEGUARD



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.



This apparatus is manufactured to comply with the radio interference requirements.

### ***Federal Communications Commission Interference Statement***

This equipment has been tested and found to comply with the limits for a Class B digital service, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- All external cables connecting to this basic unit must be shielded.  
For cables connecting to PCMCIA cards, see the option manual or installation instructions.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### ***RF exposure warning***

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

### ***DGT Warning Statement***

Article 12 Without permission, any company, firm or user shall not alter the frequency, increase the power, or change the characteristics and functions of the original design of the certified lower power frequency electric machinery.

Article 14 The application of low power frequency electric machineries shall not affect the navigation safety nor interfere a legal communication, if an interference is found, the service will be suspended until improvement is made and the interference no longer exists.

## **Trademark Acknowledgements**

iPad® & iPhone® are the registered trademarks of Apple Inc.

Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Microsoft®, Windows® & Internet Explorer® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

## **Disclaimer**

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

This product doesn't have a standby / off mode.

## **MPEG4 Licensing**

THIS PRODUCT IS LICENSED UNDER THE MPEG4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).

## **GPL Licensing**



This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License ("GPL") or the GNU Lesser Public License ("LGPL").

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

[http://download.dvrtw.com.tw/GPL/076D\\_Series/arm-linux-2.6.tar.gz](http://download.dvrtw.com.tw/GPL/076D_Series/arm-linux-2.6.tar.gz)

# TABLE OF CONTENTS

|   |    |
|---|----|
| 1. OVERVIEW.....  | 1  |
| 1.1 Product Features.....                                     | 1  |
| 1.2 Package Content.....                                      | 1  |
| 1.3 Hardware Overview.....                                    | 1  |
| 1.4 Rear Panel.....   | 2  |
| 1.5 External I/O Port.....                                    | 2  |
| 1.6 Status Indicator.....                                     | 2  |
| 1.7 Insert a Micro SD Card (Selected Models Only).....        | 3  |
| 2. CAMERA ACCESS WITH INTERNET EXPLORER.....                  | 4  |
| 2.1 Camera Login.....   | 4  |
| 2.2 Control Panel Overview.....                               | 5  |
| 2.3 Digital PTZ (DPTZ) Operations (Selected Models Only)..... | 6  |
| 2.4 Event Record Search & Playback.....                       | 7  |
| 3. CAMERA CONFIGURATIONS.....                                 | 8  |
| 3.1 System configuration menu.....                            | 8  |
| 3.2 Network.....  | 9  |
| 3.2.1 Network.....  | 9  |
| 3.2.2 QoS.....  | 9  |
| 3.2.3 Wireless.....   | 10 |
| 3.2.4 DDNS.....   | 10 |
| 3.2.5 SNTP.....   | 10 |
| 3.2.6 FTP.....  | 11 |
| 3.2.7 MAIL.....   | 11 |
| 3.2.8 Filter.....   | 11 |
| 3.2.9 UPnP / Bonjour.....                                     | 12 |
| 3.3 Camera.....   | 13 |
| 3.3.1 Camera.....   | 13 |
| 3.3.2 Video.....  | 13 |
| 3.3.3 Color.....  | 13 |
| 3.3.4 Audio.....  | 14 |
| 3.3.5 LED.....  | 14 |
| 3.3.6 Advanced.....   | 14 |
| 3.4 Record.....   | 15 |
| 3.4.1 Record.....   | 15 |
| 3.4.2 Record Timer.....                                       | 15 |
| 3.5 Storage.....  | 16 |
| 3.5.1 Memory.....   | 16 |
| 3.6 Trigger.....  | 16 |
| 3.6.1 Trigger.....  | 16 |
| 3.6.2 Push Video.....   | 18 |
| 3.7 General.....  | 19 |
| 3.7.1 General.....  | 19 |
| 3.7.2 Time.....   | 19 |
| 3.7.3 Server Log.....   | 20 |
| 3.7.4 Online.....   | 20 |
| 3.7.5 Account.....  | 21 |
| 3.7.6 Maintenance.....  | 21 |
| APPENDIX 1 PRODUCT SPECIFICATIONS.....                        | 23 |
| APPENDIX 2 BIT RATE TABLE FOR REFERENCE.....                  | 25 |
| APPENDIX 3 Q&A.....   | 28 |
| APPENDIX 4 RECORDING TIME TABLE.....                          | 29 |
| APPENDIX 5 MICRO SD CARD COMPATIBLE LIST.....                 | 30 |

# 1. OVERVIEW

## 1.1 Product Features


- **EaZy Networking** to get your camera online in three steps with your **iPhone / iPad / Android mobile devices**
- **Push Video** support to send an event notification to your **iPhone / iPad / Android mobile devices** immediately when an alarm event occurs.
- **External alarm I/O device** connection
- Microphone built-in for **audio recording**
- **Remote Surveillance**  
-- **Fully compatibility** on **iPhone & iPad**, and **Internet Explorer** on Windows operating system
- **(Optional) 1.3 Megapixel** with **HDTV 720p** quality, allowing users to notice minor details more easily
- **(Optional) Micro SD card** support for video recording
- **(Optional) Network** access via either a **wireless IEEE 802.11 b/g/n connection** or a wired Ethernet connection to provide flexible installation options
- **(Optional) White LED** built-in to illuminate the scene manually, scheduled by a timer, or triggered by a motion, an alarm, or an audio event

## 1.2 Package Content


- |   |   |
|---|---|
| <input type="checkbox"/> Network camera       | <input type="checkbox"/> Camera Bracket     |
| <input type="checkbox"/> Quick Setup          | <input type="checkbox"/> I/O Terminal block |
| <input type="checkbox"/> RJ45 Network cable   | <input type="checkbox"/> Adapter (Optional) |
| <input type="checkbox"/> CD Manual (Optional) | <input type="checkbox"/> Antenna (Optional) |

## 1.3 Hardware Overview

### Type 1

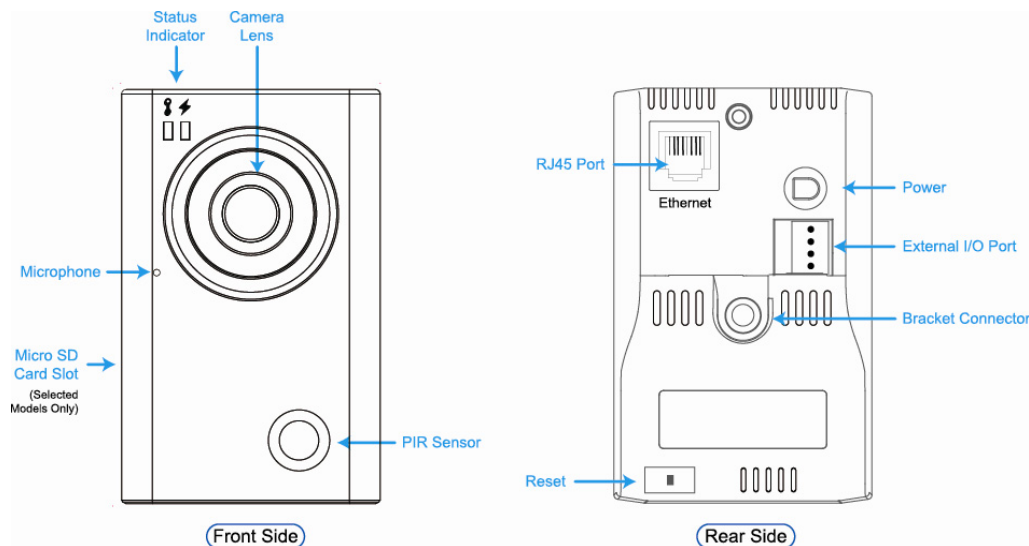

### Type 2

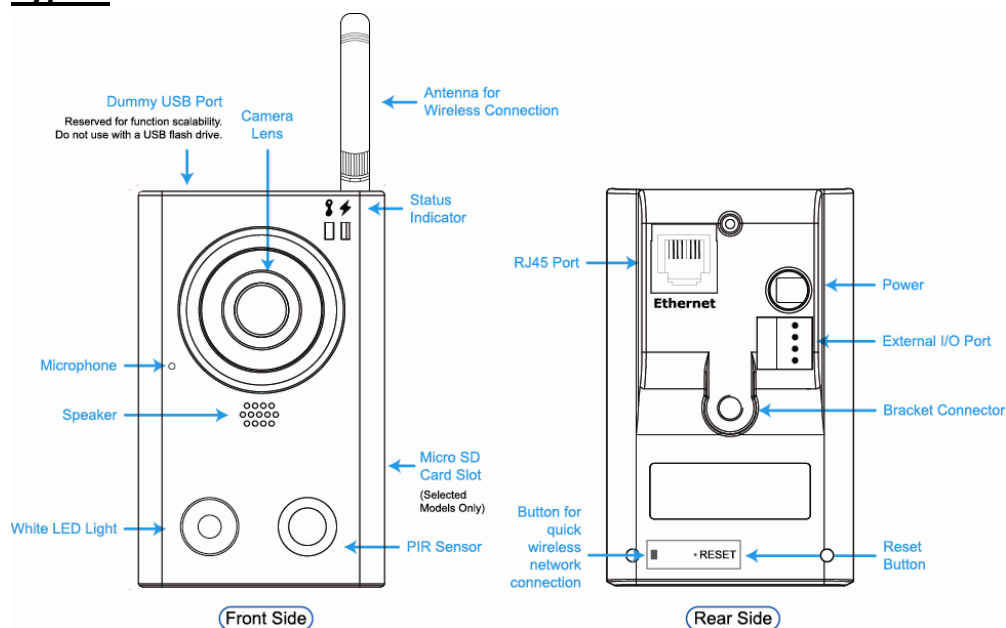


## 1.4 Rear Panel

|                   |  |
|-------------------|--|
| RJ45 Port:        | Connect your network cable.  |
| Power:            | Connect the supplied regulated power supply.   |
| Reset:            | With the power connected, press to reset all parameters, including the IP address to factory default settings.<br>The camera will reboot after default reset. Please do not disconnect your camera during the reset process. |
| External I/O Port | A 4-pin I/O terminal is supplied with the camera for external alarm device connection. For details, please refer to "1.5 External I/O Port" at page 2.   |



## 1.5 External I/O Port

This camera supports external I/O device connection, and a 4-pin I/O terminal is supplied with this camera for easy connection.

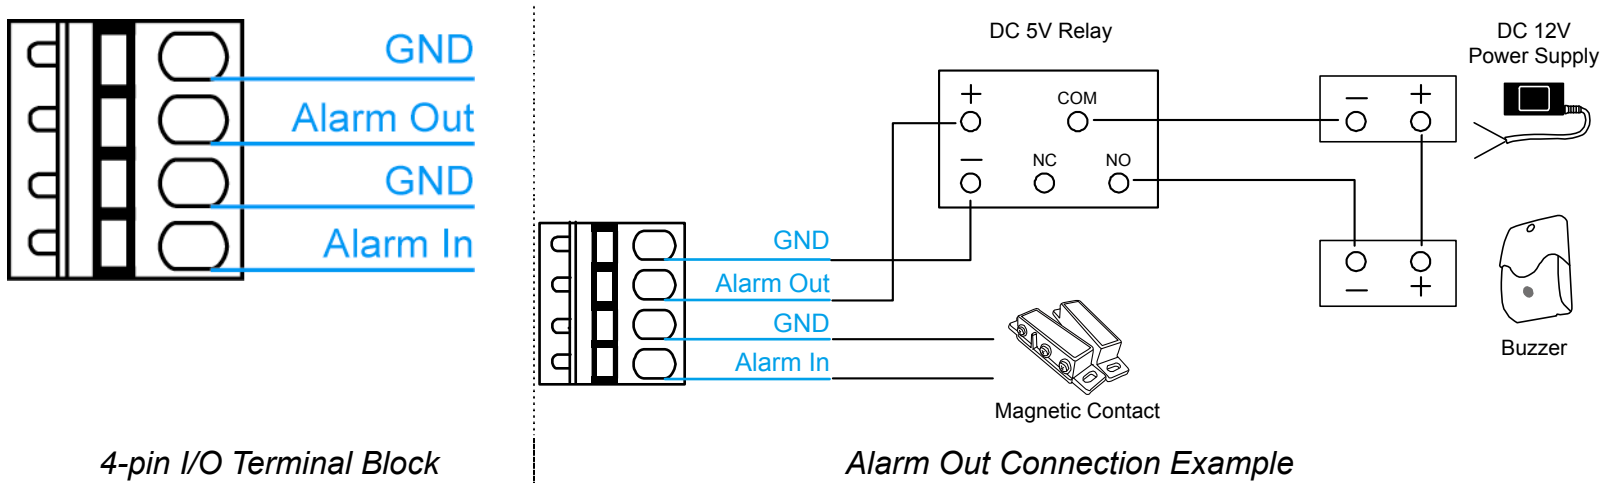Below shows which input on the I/O terminal you should use for wiring when you want to connect an external device to this camera.



## 1.6 Status Indicator

| ICON  |  LAN connection status |  Internet connection status |
|---|---|--|
| <b>System Status</b>  |   |  |
| During powering on  | Always on   | Always off   |
| Reset default   | Blinking (on 250 ms, off 250 ms)<br>●○○●○○●○○●○○  | Always off   |
| Upgrade   | Blinking (on 250 ms, off 250 ms)<br>●○○●○○●○○●○○  | Blinking (on 250 ms, off 250 ms)<br>●○○●○○●○○●○○   |
| <b>Connection Status</b>  |   |  |
| LAN connected   | Always on   | --   |
| LAN disconnected  | Blinking (on 100 ms, off 500 ms)<br>●○○●○○●○○   | --   |
| Internet connected  | --  | Always on  |
| Internet disconnected   | --  | Blinking (on 100 ms, off 500 ms)<br>●○○●○○●○○  |
| <b>Micro SD Card Status</b>   |   |  |
| Micro SD card error   | Keep current status for 20 sec → Blinking for 3 sec → Return to current status                            |  |
| <b>Status during Network Setup</b>                                  |   |  |
| <EaZy Networking><br>Failed to connect to<br>EagleEyes cloud server | --  | Blinking<br>(on 5 sec, off 0.5 sec, on 0.5 sec, off 0.5 sec, on 5 sec)<br>●●●●○○●●●●                             |
| <Other Methods><br>Port forwarding required                         | --  | Blinking<br>(on 5 sec, off 0.5 sec, on 0.5 sec, off 0.5 sec, on 5 sec)<br>●●●●○○●●●●                             |

\* LED blinking frequency - ● LED on / ○ LED off


## 1.7 Insert a Micro SD Card (Selected Models Only)

For local video recording, a micro SD card slot can be found on the side of the camera.

---

**Note:** Before inserting a micro SD card, make sure you've copied all important data saved in the card (if any) to other storage media, or the data will be removed after inserting it to the camera.

---

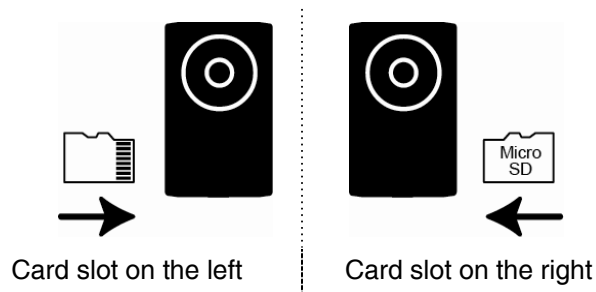

Check the indication above to ensure where your micro SD card is, and insert it to your camera.

---

**Note:** It's recommended to insert or remove the micro SD card with power disconnected, or the camera will reboot.

---

---

**Note:** For the compatible list of the micro SD card, please refer to "APPENDIX 5 MICRO SD CARD COMPATIBLE LIST" at page 30.

---

## 2. CAMERA ACCESS WITH INTERNET EXPLORER

**Note:** If you're using EaZy Networking to get your camera online, camera access with Internet Explorer is currently not available, but will be ready soon. To access the camera, please use your mobile device, such as iPhone, iPad or Android phone / tablet instead.

This network camera can be accessed via Microsoft Internet Explorer, and iPhone / iPad / Android mobile devices with our self-developed program "EagleEyes" installed depending on different using situations.

**Note:** For details about accessing network cameras via iPhone / iPad / Android mobile devices, please refer to <http://www.eagleeyesctv.com>.

Before using the camera, make sure you have configured the network settings, and the network connection is fine.

For network configurations, please refer to:

- **"Quick Setup"** supplied with your camera if you're using a router for Internet access, and you have a iPhone / iPad.
- **"Advanced Network Setup"** downloadable from [www.surveillance-download.com/user/ez.swf](http://www.surveillance-download.com/user/ez.swf) if you're not using a router for Internet access.

### 2.1 Camera Login

Step1: Open your web browser, and key in <http://ipaddress:portnum> in the URL address box.

For example, for the IP address 60.121.46.236 and port No. 888, please key in "<http://60.121.46.236:888>" into the URL address box, and press "Enter".

Step2: In the login page, key in the user name and password, and enter the security code from the image below if any. Then, click "LOGIN".

Step3: The wizard is then started.

- To skip the wizard and directly access the camera live view, click "Close".
- To directly access the camera live view without starting the wizard for the login next time, check "Do not start wizard at login".


**Note:** If you're prompted to install "VLC player", "Software" or "H264 Streaming Viewer", please agree to proceed the installation. Or, you might not be able to see the live view properly.

Step5: When the login is successful, the live view is shown.







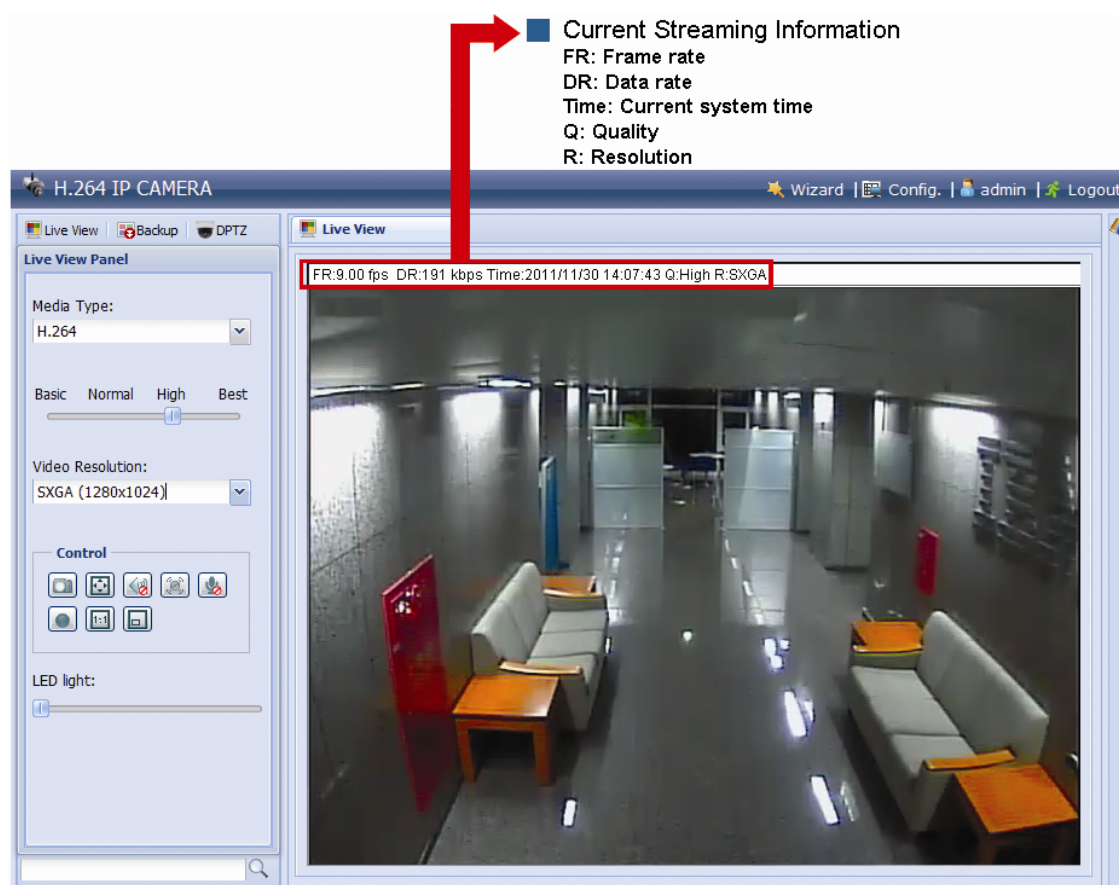


## 2.2 Control Panel Overview

**Note:** The buttons available depend on the camera model you have, and the user level used to log in.



| Function   | Icon   | User Level                                    | Description  |  |  |
|--|--|---|--|--|--|
| Live   |  | Supervisor / Power User / Normal User / Guest | Switch to the live view page.  |  |  |
| DPTZ*  |  | Supervisor / Power User / Normal User         | Switch to the DPTZ configuration page.<br>For details, please refer to "2.3 Digital PTZ (DPTZ) Operations" at page 6.  |  |  |
| Backup   |  | Supervisor / Power User                       | Enter the event record list for video playback.<br>For details, please refer to "2.4 Event Record Search & Playback" at page 7.  |  |  |
| Config.  |  | Supervisor                                    | Switch to the system configuration page, and the functions available for "Supervisor" and "Power User" are different.<br>For details, please refer to "3.1 System configuration menu" at page 8.   |  |  |
| Media Type   | --   | Supervisor / Power User / Normal User / Guest | Select the image player from the drop-down list: <ul style="list-style-type: none"> <li>■ H.264 / MPEG-4 / Motion JPEG</li> <li>■ QuickTime<br/>QuickTime is Apple Inc.'s multimedia software. You need to have QuickTime installed in your operating system before selecting "QuickTime". When it is selected, you will be promoted to enter the user name and password to access the camera.</li> <li>■ VLC</li> </ul>   |  |  |
| Quality  | --   | Supervisor / Power User / Normal User         | Click & drag the slider to select the video quality: Basic / Normal / High / Best.   |  |  |
| Video Resolution   | --   | Supervisor / Power User / Normal User         | Select the image resolution from the drop list: <table border="0" style="width: 100%;"> <tr> <td style="vertical-align: top;"> <b>1.3MP Model</b><br/> <ul style="list-style-type: none"> <li>■ SXGA (1280 x 1024)</li> <li>■ HD720P (1280 x 720)</li> <li>■ VGA (640 x 480)</li> <li>■ QVGA (320 x 240)</li> </ul> </td> <td style="vertical-align: top; border-left: 1px dashed black; padding-left: 10px;"> <b>D1 Model</b><br/> <ul style="list-style-type: none"> <li>■ D1 (720 x 480)</li> <li>■ CIF (352 x 240)</li> </ul> </td> </tr> </table> | <b>1.3MP Model</b><br><ul style="list-style-type: none"> <li>■ SXGA (1280 x 1024)</li> <li>■ HD720P (1280 x 720)</li> <li>■ VGA (640 x 480)</li> <li>■ QVGA (320 x 240)</li> </ul> | <b>D1 Model</b><br><ul style="list-style-type: none"> <li>■ D1 (720 x 480)</li> <li>■ CIF (352 x 240)</li> </ul> |
| <b>1.3MP Model</b><br><ul style="list-style-type: none"> <li>■ SXGA (1280 x 1024)</li> <li>■ HD720P (1280 x 720)</li> <li>■ VGA (640 x 480)</li> <li>■ QVGA (320 x 240)</li> </ul> | <b>D1 Model</b><br><ul style="list-style-type: none"> <li>■ D1 (720 x 480)</li> <li>■ CIF (352 x 240)</li> </ul> |   |  |  |  |
| Live View Size:  |  | Supervisor / Power User / Normal User         |  |  |  |
| Normal Size*   |  |   | The current live view size is the same as the selected resolution.   |  |  |
| Fit to screen*   |  |   | The selected resolution is resized to fit into the current live view size.<br><i>This icon doesn't work when the selected resolution is VGA or QVGA.</i>   |  |  |
| Scale*   |  |   | Click and hold the movable square on the left bottom corner of the live view to move<br><i>This icon appears only when the selected resolution is larger than the current live view size.</i>  |  |  |
| CIF Resize   |  |   | The QVGA resolution is resized to fit into the current live view size.<br><i>This icon appears only when the selected resolution is QVGA (320 x 240) or CIF (352 x 240).</i>   |  |  |


| Function         | Icon  | User Level                            | Description  |
|------------------|---|---------------------------------------|--|
| Snapshot         |  | Supervisor / Power User / Normal User | Click to take a snapshot of the current view on a new window. Right click on the picture and re-save it to the location you want.  |
| Full Screen      |  | Supervisor / Power User / Normal User | Click to display the image in full screen.<br>To exit the full screen mode, press "Esc" on your keyboard.  |
| DPTZ*            |  | Supervisor / Power User / Normal User | Click to enable digital PTZ functions.   |
| Audio On / Off   |  | Supervisor / Power User / Normal User | Click to switch the audio-in on / off.   |
| Manual Alarm Out |  | Supervisor / Power User / Normal User | Click to force the connected alarm-out device to work. For example, when your alarm device is a buzzer, click this button and your buzzer will start to sound even if there's no alarm event.  |
| Microphone*      |  | Supervisor                            | Click to switch the audio-out on / off.  |
| Record On / Off* |  | Supervisor / Power User / Normal User | Click to start / stop video recording.<br>A micro SD card must be inserted for this function to work properly.   |
| LED Light*       | --  | Supervisor / Power User / Normal User | Click and drag the slider to adjust the brightness of the LED light.<br><i>When the brightness level is adjusted to 100%, the system will enable the brightness of 100% for 3 minutes, reduce to 50% for 1 minute, and return to 100% for 3 minutes, etc. This is to protect and extend the lifetime of the white LED.</i> |

\* Selected Models Only




## 2.3 Digital PTZ (DPTZ) Operations (Selected Models Only)

This camera has PTZ capability, i.e. digital PTZ (hereafter called "DPTZ"), for wide area monitoring.

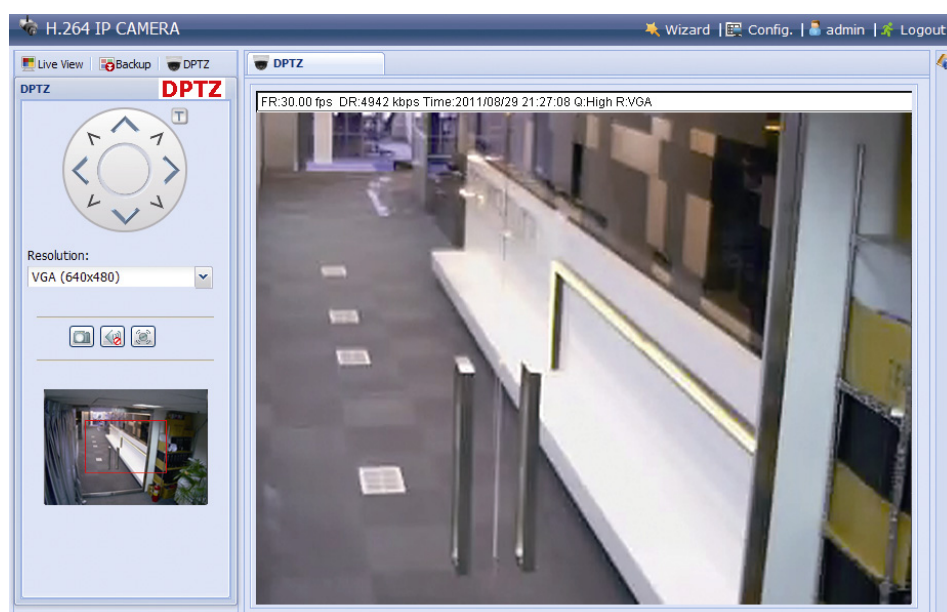STEP1: Click "DPTZ" to show the DPTZ control panel.




STEP2: Select the functions when needed:







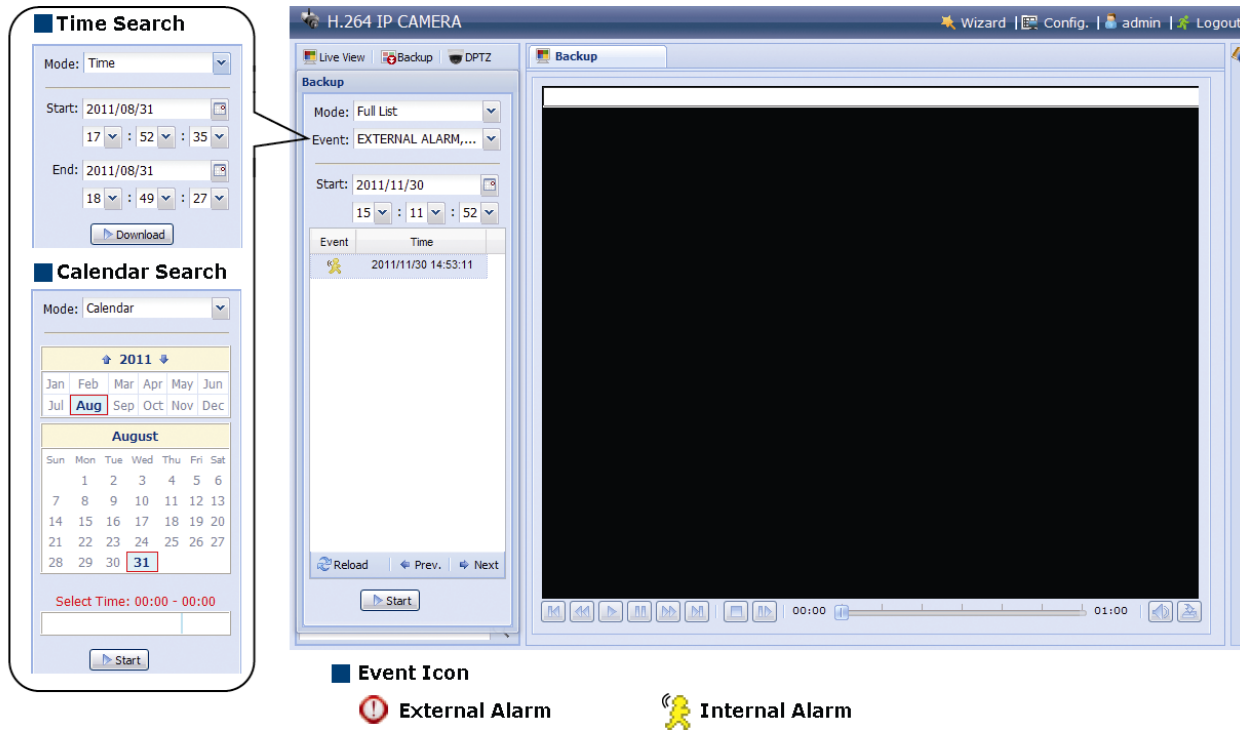


| FUNCTION       | ICON  | DESCRIPTION   |
|----------------|---|---|
| Resolution     | --  | Select the video resolution for the DPTZ function. Only "VGA" and "QVGA" are available.   |
| Take snapshots |  | Click to take a snapshot of the current view on a new window. Right click on the picture and re-save it to the location you want.   |
| Audio On / Off |  | Click to switch the audio-in on / off.  |
| Alarm Out      |  | Click to force the connected alarm-out device to work. For example, when your alarm device is a buzzer, click this button and your buzzer will start to sound even if there's no alarm event. |

## 2.4 Event Record Search & Playback

This camera can only save up to three alarm recordings.

**Note:** To save more recorded data, it's recommended to use this camera with the compatible NVR.



|   |                      |   |
|---|----------------------|---|
|  | Previous / Next Hour | Click to jump to the next / previous time interval in an hour, for example, 11:00 ~ 12:00 or 14:00 ~ 15:00, and start playing the earliest event video clip recorded during this whole hour.  |
|  | Fast Forward         | Increase the speed for fast forward. Click to get 2X, 4X, 8X & 16X speed forward eventually.  |
|  | Fast Rewind          | Increase the speed for fast rewind. Click to get 2X, 4X, 8X & 16X speed rewind eventually.  |
|  | Play                 | Click to play the current video clip.   |
|  | Pause                | Click to pause the video playback.  |
|  | Stop                 | Click to stop the video playback.   |
|  | Step                 | In the pause mode, click to get one frame forward.  |
|  | Audio                | Click to mute the playback if necessary, and click again to restore.  |
|  | Download             | Click to download the current video clip to the specified path in your PC.<br><i>The downloaded video can only be opened by our own video player. Please go to "General" → "Maintenance" to download the video player, or get the player from the CD supplied with the sales package.</i> |

## 3. CAMERA CONFIGURATIONS

Users can further configure this network camera by accessing via Internet Explorer.

### 3.1 System configuration menu

Click “Config.” to enter the configuration page.

**Note:** You need to be “Supervisor” to enter the system configuration page. If you’re not a “Supervisor”, please re-log into the camera with the correct user name and password.

The functions are categorized into six menus: Network, Camera, Record Timer, Storage, Trigger and General.

- For details about “Network”, please refer to “\* For *selected models only* 3.2 Network” at page 9.
- For details about “Camera”, please refer to “3.3 Camera” at page 13.
- For details about “Camera”, please refer to “3.4 Record” at page 15.
- For details about “Storage”, please refer to “3.5 Storage” at page 16.
- For details about “Trigger”, please refer to “3.6 Trigger” at page 16.
- For details about “General”, please refer to “3.7 General” at page 17.

| Main Menu    | Sub-Menu     | Reference   |
|--------------|--------------|---|
| Network      | Network      | Configure network settings.   |
|              | QoS          | Limit the data flow for live streaming.   |
|              | Wireless*    | Configure the camera to connect to your wireless network.   |
|              | DDNS         | Enter DDNS information when the network type is PPPOE or DHCP.  |
|              | SNTP         | Synchronize your camera time with the networked computer systems.   |
|              | FTP          | Enter the FTP information for event notifications when “FTP” is chosen in “Trigger” → “Trigger”.  |
|              | Mail         | Enter Email information for event notifications when “Email” is chosen in “Trigger” → “Trigger”.  |
|              | Filter       | Choose to permit or block the IP address(es) which can access this camera.  |
|              | UpnP         | <i>*Suitable for Windows-based operating system.</i><br>Allow this camera to be detected among devices within the same network area for easy and quick usage.   |
| Camera       | Bonjour      | <i>*Suitable for Apple Mac-based operating system.</i><br>Allow this camera to be detected among devices within the same network area for easy and quick usage. |
|              | Camera       | 1. Set the camera title.<br>2. Specify the display position of the camera title.  |
|              | Video        | Adjust video-related settings in different video format.  |
|              | Color        | Adjust the color performance.   |
|              | Audio        | Adjust the audio volume of the built-in microphone.   |
|              | LED*         | 1. Set if the LED light will be activated automatically when the monitoring area is dark.<br>2. Schedule when the LED light will be activated.                  |
| Record       | Advanced     | Adjust the camera parameters if necessary.  |
|              | Record       | Configure the record function.  |
| Record Timer | Record       | Configure the record function.  |
|              | Record Timer | Schedule human detection recording and external alarm recording.  |
| Storage      | Memory       | Check the current storage capacity and clear all recorded data when needed.   |
| Trigger      | Trigger      | 1. Enable / disable the motion, alarm, and human detection.<br>2. Set the motion detection area.<br>3. Configure how the camera reacts for any event.           |
|              | Push Video   | 1. Set Push Video rules.<br>2. Enable and schedule when to enable Push Video.   |

| Main Menu | Sub-Menu    | Reference   |
|-----------|-------------|---|
| General   | General     | <ol style="list-style-type: none"> <li>1. Select the language of the web browser.</li> <li>2. Check the MAC address of the camera.</li> <li>3. Lock camera access after the specified time.</li> <li>4. Enable or disable LED status indication.</li> </ol> |
|           | Time        | Set daylight saving time and the current time.  |
|           | Server Log  | Check the system event logs.  |
|           | Online      | Check the current online user(s).   |
|           | Account     | <ol style="list-style-type: none"> <li>1. Create a new user account with different access privilege.</li> <li>2. Modify or delete an existing user account.</li> </ol>  |
|           | Maintenance | <ol style="list-style-type: none"> <li>1. Check the current firmware version and upgrade your camera.</li> <li>2. Copy system configurations.</li> <li>3. Reboot the camera.</li> <li>4. Download the video player to play the recorded data.</li> </ol>    |

\* For selected models only

## 3.2 Network

### 3.2.1 Network

You can set the network configuration of the network camera depending on your network type.

For details, please refer to “Advanced Network Setup” from [www.surveillance-download.com/user/ez.swf](http://www.surveillance-download.com/user/ez.swf).

**Network Configuration**

IP Type:  Static IP  PPPoE  DHCP

Server IP:

Gateway:

Net Mask:

Port:

DNS1:

DNS2:

MAC Address: 00:0E:53:20:E7:3E

### 3.2.2 QoS

QoS, Quality of Service, is the ability to control the data flow for real-time streaming. This function is important if your network bandwidth is insufficient and you have other devices to share the network bandwidth.

Check “QoS Enable”, and set the max. upload rate from 256 to 10240 kbps.

**QoS Configuration**

QoS:  Enable  Disable

Interface:

Max. Upload Rate:  kbps

### 3.2.3 Wireless

**Note:** This function is available only for selected models only.

Configure the camera to connect to your wireless network if you're not using the quick wireless network connection function. For details, please refer to "Advanced Network Setup" downloadable from [www.surveillance-download.com/user/ez.swf](http://www.surveillance-download.com/user/ez.swf).

### 3.2.4 DDNS

Select "On" when the selected network type in "Network" is "PPPOE" or "DHCP".

For details, please refer to "Advanced Network Setup" from [www.surveillance-download.com/user/ez.swf](http://www.surveillance-download.com/user/ez.swf).

### 3.2.5 SNTP

SNTP (Simple Network Time Protocol) is used to synchronize your camera time with the networked computer systems.

| Function     | Description  |
|--------------|--|
| GMT          | Once users choose the time zone, the network camera will adjust the local area time of the system automatically.                 |
| NTP Server   | Simply use the default SNTP server (For example, tock.stdtime.gov.tw) or change to another server with which users are familiar. |
| Sync. Period | Select "Daily" to synchronize the camera time with the network time every day or "None" to turn off this function.               |
| Sync         | Click and the network camera will synchronize the time with the network time.  |

### 3.2.6 FTP

Enter the detailed FTP information and click “Save” to confirm. The information you set here will be applied when “FTP” is selected in “Trigger” → “Trigger”.

### 3.2.7 MAIL

Enter the detailed e-mail information and click “Save” to confirm. The information you set here will be applied when “Email” is selected in “Trigger” → “Trigger”.

| Function            | Description  |
|---------------------|--|
| SMTP Server         | Enter the SMTP server address provided from your e-mail system supplier.   |
| Port                | Enter the port number provided from your e-mail system supplier. If this column is left blank, the e-mail server will use port 25 to send e-mails. |
| Mail From           | Enter the name of the sender.  |
| SSL Encryption      | Select “Yes” if your e-mail server is using SSL encryption to protect your e-mail content from unauthorized access.                                |
| Verify Password     | Some mail servers are required to verify the password. Please enter the “user name” and “password”.  |
| E-Mail Address List | Add the e-mail address(s) of the assigned recipient(s).  |
| Test                | When all information is entered, click “Test Mail” to try if the receipt.  |

### 3.2.8 Filter

Choose to permit or block the IP address(es) which can access this camera, and click “Save” to confirm.

| Function                             | Description   |
|--------------------------------------|---|
| <b>■ Filter Configuration</b>        |   |
| Error Count                          | Set the maximum count for login failure. When the maximum count is reached, the IP address trying to access the network camera will be locked.  |
| Error Lock Time                      | Set the lock time in minutes when the maximum count of error login for an IP address is reached.  |
| Echo Request                         | Select “Non-Block” to allow other users to use the ping command to detect the IP address of your network camera, or “Block” to deny the ping command request.   |
| <b>■ IP/MAC Filter Configuration</b> |   |
| IP/MAC Filter                        | Choose to enable or disable the filter function.  |
| IP/MAC Filter Policy                 | If “Enable” is selected, choose whether you want to permit (Allow) or block (Deny) the IP address list below.   |
| <b>■ IP/MAC Filter Rules</b>         |   |
| Rule                                 | <ul style="list-style-type: none"> <li>To add an item to the IP address list, key in the IP address in “Rule”, and click “Add”.</li> <li>To remove an existing item in the IP address list, click the item you want to remove, and click “Delete”.</li> </ul> |

### 3.2.9 UPnP / Bonjour

“UPnP” stands for “Universal Plug and Play”, which allows devices to connect seamlessly in the home and corporate environments and simplify installation of computer components, and is only suitable for Microsoft Windows-based operating system.


“Bonjour” functions the same as “UPnP”, but it’s only suitable for Apple Mac-based operating system.

#### ➤ UPnP

#### ➤ Bonjour

Check “Enable” to allow the network camera to be detected among devices within the same network area, and set the identification name of the camera in “Friendly name”.

When this function is activated, the other PC within the same domain as this camera will be able to search this camera in:

- “Network Neighbor” with the identification name set in “Friendly name” for Windows-based PC, or
- “” (finder) or “Bookmark” with the identification name set in “Device Name” for Mac-based PC.

Double-click it to quickly open the web browser for camera access.

#### **Port Mapping (Available only in UPnP)**

This function can eliminate the need to additionally access the router for port forwarding.

For details, please refer to “Advanced Network Setup” from [www.surveillance-download.com/user/ez.swf](http://www.surveillance-download.com/user/ez.swf).

---

**Note:** Before using this function, make sure your router supports UPnP, and this function is enabled. If not, please access your router additionally for port forwarding.

---

When “Port Mapping” is set to “Enable”, the system will automatically assign an IP address or port number for you if no IP address or port number is entered.




**Note:** When the configurations are saved successfully, you'll see a message indicating the IP address and port number assigned to this network camera.

### 3.3 Camera

#### 3.3.1 Camera

In this menu, you can set the camera title, and specify where to display this title on the display.

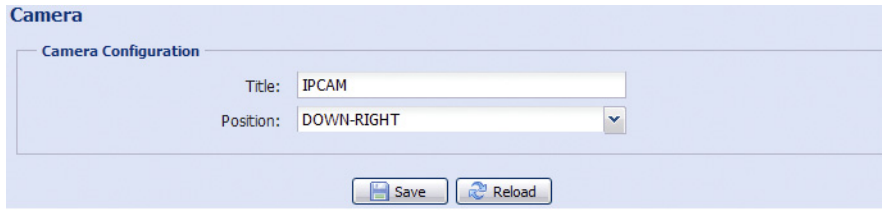

#### 3.3.2 Video

Adjust video-related settings in different video format.

- "Quality" is related to image clearness.
- "FPS" is related to the fluency of the video. The more the FPS, the more fluent the video.
- "Max Bit Rate" is the maximum limitation of data transmission in the selected image format and resolution.

**Note:** QQVGA & QCIF are for mobile surveillance only.

#### ■ 1.3 MP Model

**Video Configuration**

Configuration  
Power Line Frequency: 60 Hz

**H264**

| Resolution    | Quality | FPS | Max Bit Rate |
|---------------|---------|-----|--------------|
| SXGA / HD720P | HIGH    | 30  | 5000         |
| VGA           | HIGH    | 30  | 3000         |
| QVGA          | HIGH    | 30  | 3000         |
| QQVGA         | HIGH    | 30  | 3000         |

**MPEG4**

| Resolution    | Quality | FPS | Max Bit Rate |
|---------------|---------|-----|--------------|
| SXGA / HD720P | HIGH    | 20  | 5000         |
| VGA           | HIGH    | 30  | 3000         |
| QVGA          | HIGH    | 30  | 3000         |
| QQVGA         | HIGH    | 30  | 3000         |

**JPEG**

| Resolution    | Quality | FPS |
|---------------|---------|-----|
| SXGA / HD720P | HIGH    | 30  |
| VGA           | HIGH    | 30  |
| QVGA          | HIGH    | 30  |
| QQVGA         | HIGH    | 30  |

Save Reload

#### ■ D1 Model

**Video Configuration**

Configuration  
Power Line Frequency: 50 Hz

**H264**

| Resolution | Quality | FPS | Max Bit Rate |
|------------|---------|-----|--------------|
| D1         | BEST    | 30  | 5000         |
| CIF        | HIGH    | 30  | 3000         |

**MPEG4**

| Resolution | Quality | FPS | Max Bit Rate |
|------------|---------|-----|--------------|
| D1         | HIGH    | 20  | 5000         |
| CIF        | HIGH    | 30  | 3000         |

**JPEG**

| Resolution | Quality | FPS |
|------------|---------|-----|
| D1         | HIGH    | 30  |
| CIF        | HIGH    | 30  |

Save Reload

#### 3.3.3 Color

Adjust the color performance from Brightness, Contrast, Hue and Saturation. Click and drag the slider to preview the color change on the right side of this page and adjust the image color.

To restore the default values, click "Back to Default".

**Color Configuration**

Brightness: 50

Contrast: 55

Hue: 50


Saturation: 65

**Live View**

Back to Default Reload

### 3.3.4 Audio

Drag the slider to adjust the volume of the microphone for audio streaming.

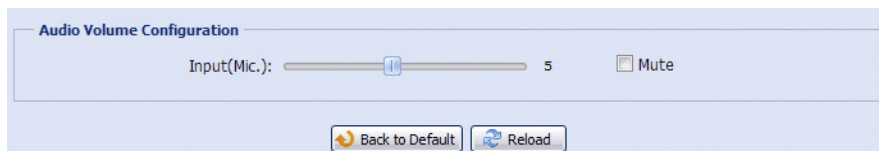

### 3.3.5 LED


**Note:** This function is available only for selected models only.

To enable the LED light when the monitoring area is getting dark, select “Yes” in “Auto Enable”.

To schedule the LED light to be on, select “Timer” to enable the schedule and set the day and time.

To specify the day and time to enable the LED light when an external alarm or a motion event occurs, select “External Alarm” or “Motion” to enable this function, and set the day and time.


**Note:** For the LED light activation to work properly, please go to “Trigger” → “Trigger” to enable external alarm detection or motion detection, and select the LED alert event. For details, please refer to “3.6 Trigger” at page 16.

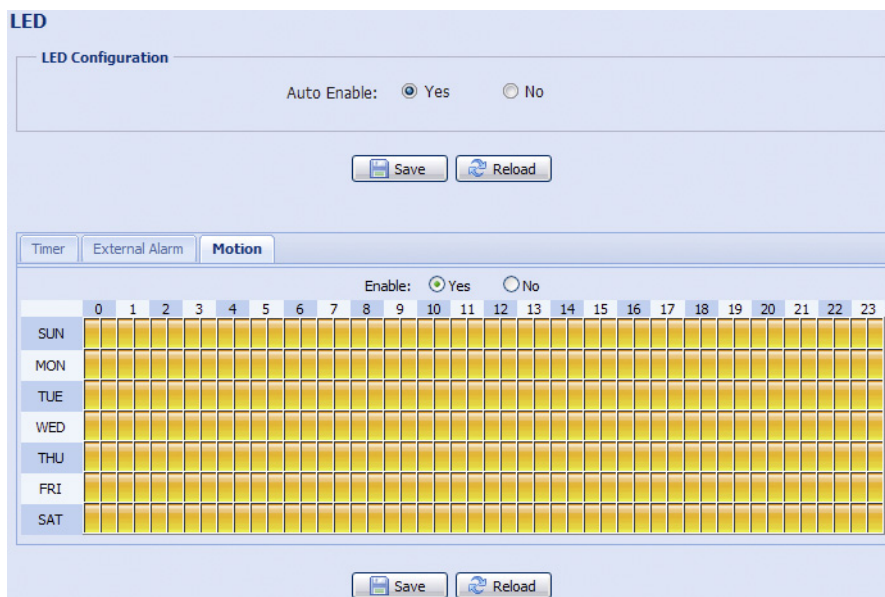


### 3.3.6 Advanced

Adjust the camera parameters if necessary.

#### 1.3 MP Model

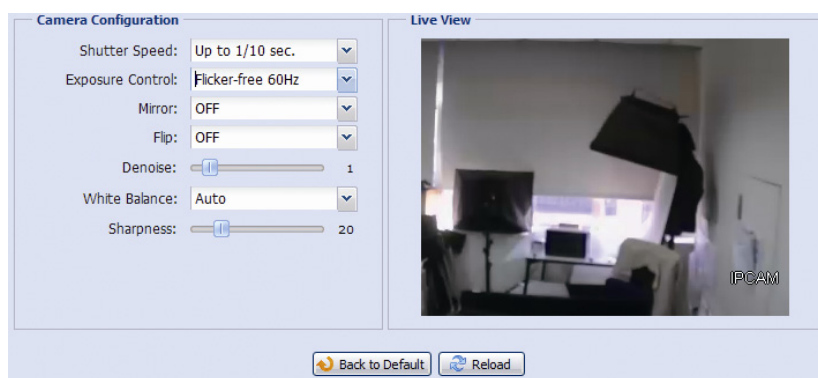

#### D1 Model

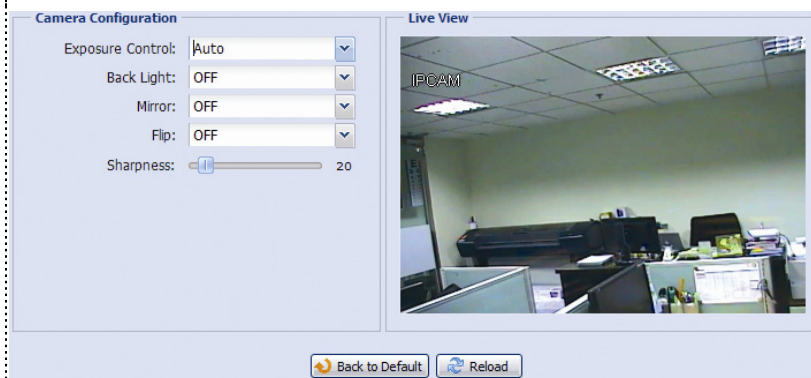

| Item             | Description  |
|------------------|--|
| Shutter Speed*   | Set the shutter speed based on your need.<br>The options are: Up to 1/10 sec, Up to 1/30, Up to 1/15, Up to 1/6, Up to 1 and Up to 2.  |
| Exposure Control | This function is used to synchronize the shutter time to the fluorescent light to suppress image flickering.   |
| Back Light**     | It is the function to adjust the image to compensate for an area that is overpowered by brightness because of excessive light. The image will be properly exposed for clearness. Select to activate (ON) or disable (OFF) this function.<br>Note: This function is available only in the day mode. |
| Mirror           | Select “ON” to rotate the images horizontally based on your installation situation when necessary.   |

| Item           | Description  |
|----------------|--|
| Flip           | Select "ON" to rotate the image 180° when necessary.   |
| De-noise*      | Click and drag the slider to adjust the level from 0 ~ 10 to decrease the noise shown in the dark environment.   |
| White Balance* | Process the current image to retain color balance over a color temperature range.<br>The options are: Auto, Incandescent Light, Cool Light, sun Light, Cloudy & Sun Shade.   |
| Sharpness      | Sharpness enhances the clarity of image detail by adjusting the aperture and sharpening the edges in the pictures.<br>Hold and drag the slider to adjust the level of sharpness from 0 ~ 100. The higher the value, the sharper the image. |

\* 1.3 MP Model Only \*\* D1 Model Only

## 3.4 Record

### 3.4.1 Record

In "Record Configuration", you can:

- Enable or disable the alarm record function. When "Enable" is set to "No", the alarm record function is disabled even if you enable it in other configuration pages.
- Select if the data should be overwritten when the memory storage is full.
- Enable or disable the audio record function.
- Select the video resolution for event recording.

**Note:** Based on the model you have, the options for "Record Resolution" might be different from the images shown below.

**Note:** The higher resolution you choose, the more accuracy and higher image quality the recording will be, but the faster the memory storage is consumed and become full.

- Set the manual record time in minutes (1 / 5 / 10 / 30 / 60) when you click the manual record icon (📷) on the live page.

**Note:** This function is available only for models with a micro SD card slot.

#### ■ Model with Micro SD Card Slot

#### ■ Model without Micro SD Card Slot

### 3.4.2 Record Timer

To schedule alarm recording or human detection recording, click "External Alarm" or "Internal Alarm" (human detection) to enable the recording, and select the day and time for recording.

**Note:** The timer must be enabled for the record function to work properly.

**Note:** The selected time will be yellow-colored.

## 3.5 Storage

### 3.5.1 Memory

In “Memory”, you can check the remaining capacity for recording, or clear all recorded data saved if needed.

---

**Note:** The recorded data will be removed also when you reset or reboot this camera.

---

For models without a micro SD card slot, you can only record a limited number of recordings. Certain models can save only up to three recordings.

For models with a micro SD card slot, you could insert a compatible micro SD card for more video recording.

---

**Note:** To know how and where to insert a micro SD card, please refer to “1.7 Insert a Micro SD Card (Selected Models Only)” at page 3.

To know the compatible list of micro SD cards, please refer to “APPENDIX 5 MICRO SD CARD COMPATIBLE LIST” at page 30.

---

---


**Note:** To save more recorded data, it’s recommended to use this camera with the compatible NVR.

---

---

**Note:** To know the total recording time per recording resolution, please refer to “APPENDIX 4 RECORDING TIME TABLE” at page 29.


---

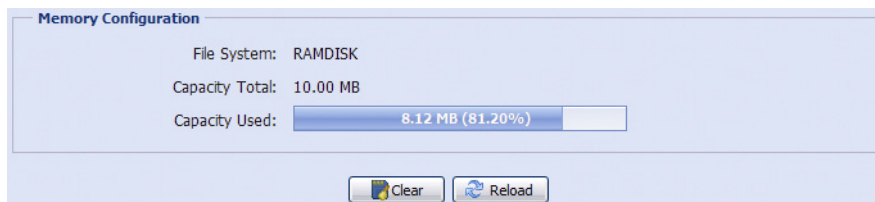


## 3.6 Trigger

### 3.6.1 Trigger

You can configure how this camera reacts when there’s an alarm, a motion or a PIR event.

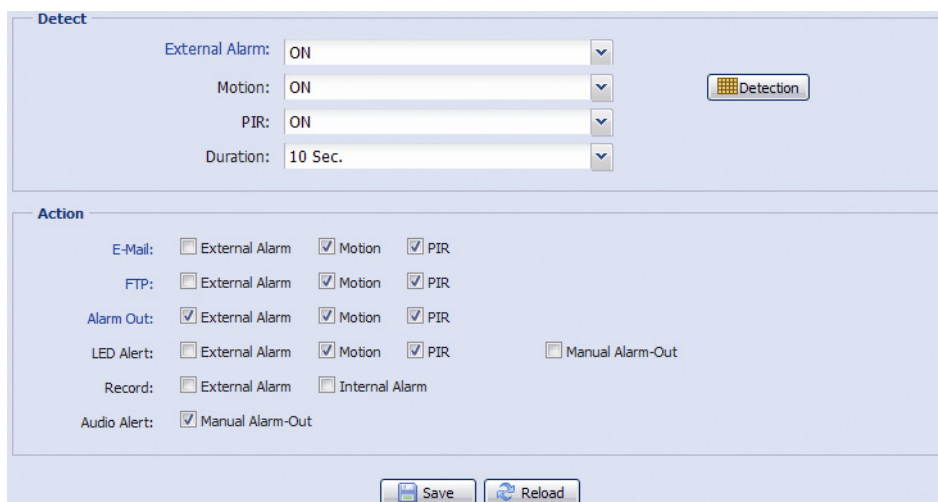

◆ Detect
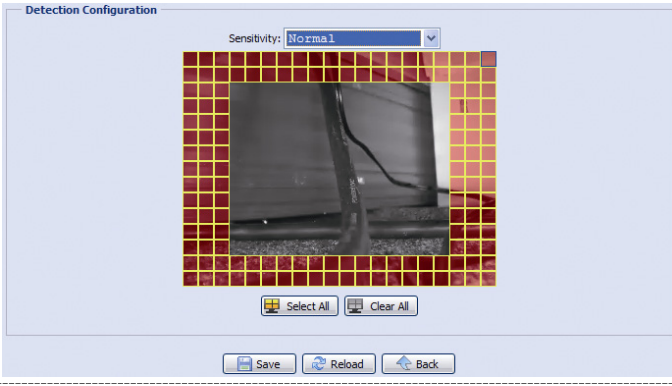
| Item           | Description   |
|----------------|---|
| External Alarm | Enable or disable detection from external alarm-in device, and click the title "External Alarm" (in blue) to set "N.O." or "N.C." depending on the configuration of your alarm-in device.   |
| Motion         | <p>Enable or disable motion detection.</p> <p><i>Motion detection is not supported when the stream format is Motion JPEG.</i></p> <p>When "ON" is selected, click "Detection" to enter the motion detection area setting page as follows:</p>  <p><b>Sensitivity:</b><br/>Set the detection sensitivity from the drop-down list: High, Normal or Low.</p> <p><b>Area Setting:</b><br/>Set the motion detection area by selecting the area grids with your mouse. Pink grids represent the area that is not being detected while the transparent grids are the area under detection. You can set multiple areas under detection.<br/>Click "Clear All" to set the whole area undetected.<br/>Click "Select All" to set the whole area under detection.</p> |
| PIR            | <p>Enable (ON) or disable (OFF) PIR detection.</p> <p><i>For Push Video to work properly, make sure this function is enabled.</i></p>   |
| Duration       | Set the duration time for trigger recording (5 / 10 / 20 / 40 seconds).   |

◆ Action

Here defines how the camera delivers alerts to you for any event.


| Item         | Description  |
|--------------|--|
| E-Mail       | <p>Select the event type you want to receive E-mail notifications when it occurs.</p> <p>Then, click the title "E-Mail" (in blue) to configure the media type (H264 / JPEG / MPEG4), file format (AVC / AVI), and record time (1 ~ 5 seconds) for the event video clip.</p> <p>The camera will send the captured video clip to the E-mail address(s) you assigned in "Network" → "Mail" once the selected event type occurs.</p> |
| FTP          | <p>Select the event type you want to receive FTP notifications when it occurs.</p> <p>Then, click the title "FTP" (in blue) to configure the media type (H264 / JPEG / MPEG4), file format (AVC / AVI), and record time (1 ~ 5 seconds) for the event video clip.</p> <p>The camera will upload the captured video clip to the FTP site you assigned in "Network" → "FTP" once the selected event type occurs.</p>               |
| Alarm Out    | <p>Select the event type you want to trigger the alarm-out device to work when it occurs.</p> <p>Then, click the title "Alarm Out" (in blue) to configure the trigger rule (LOW / HIGH).</p>   |
| LED Alert*   | <p>Select the event type you want to enable the LED light when it occurs.</p> <p><i>For "External Alarm" and "Motion", make sure you also enable the schedule timer in "Camera" → "LED". For details, please refer to "3.3.5 LED" at page 14.</i></p>  |
| Record       | Select the event type you want to enable event recording when it occurs.   |
| Audio Alert* | Select the event type you want to enable audio alert when it occurs.   |

\* For selected models only

### 3.6.2 Push Video


“Push Video” is an active notification system, different from traditional FTP and Email notification methods.

**Note:** For Push Video to work properly, make sure the record function is on in “Record” → “Record”, and the record timer for the external alarm is on in “Record” → “Record Timer”.

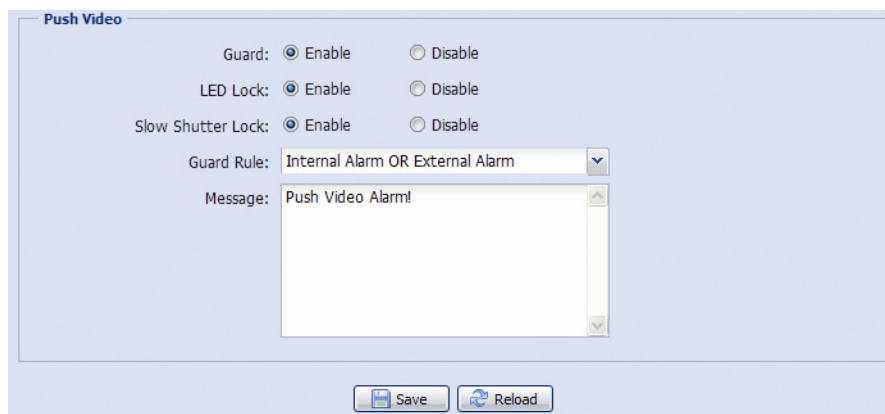

| Item              | Description   |
|-------------------|---|
| Guard             | Select to enable or disable Push Video. This function can also be enabled from your iPhone or Android mobile devices.<br><i>When this function is enabled, the image resolution is fixed to “VGA”.</i>  |
| LED Lock          | Select to fix the LED light mode to auto (Enable) or remain the current LED light mode (Disable) when Push Video is enabled.<br>When this function is enabled, it could ensure Push Video recording to get enough light when the environment is dark. This function is set to “Enable” by default.  |
| Slow Shutter Lock | Select to fix the slow shutter level to level 2 (Enable) or remain the current slow shutter level (Disable) when Push Video is enabled.<br>When this function is enabled, it could ensure Push Video recording to get clear images when the environment is dark. This function is set to “Enable” by default.   |
| Guard Rule        | Select the rule to enable Push Video from “External Alarm”, “Internal Alarm”, or “Internal Alarm OR External Alarm”. <ul style="list-style-type: none"> <li>■ External Alarm – The alarm device additionally connected to your camera</li> <li>■ Internal Alarm – The human detection function built in this camera</li> </ul> This function is set to “Internal Alarm OR External Alarm” by default. |
| Message           | Define the context when you receive the Push Video message on your iPhone or Android mobile device. Up to 28 characters are allowed.  |

To schedule when to enable or disable Push Video, please enable the Push Video timer, and select and day and time to enable this function.

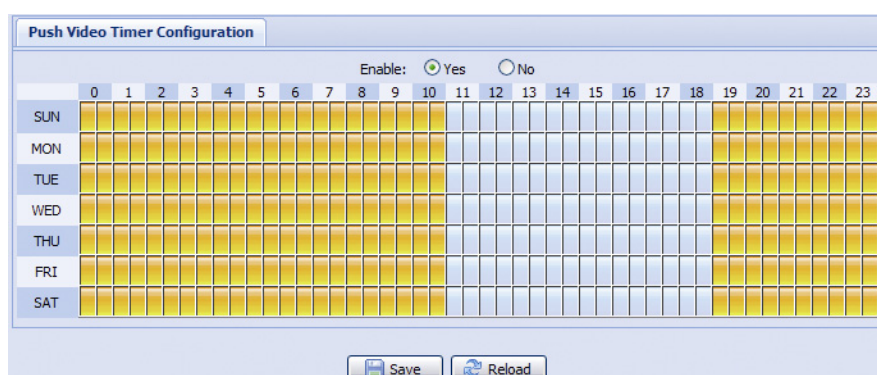

## 3.7 General

### 3.7.1 General

To change the language of UI interface, select from the drop-down list in “Language”.

To allow the status LED indicators to show the status as indicated in “1.6 Status Indicator” at page 2, select “Enable” in “Status LED Mode”; to hide the status, select “OFF”; to only show the error status, select “Temporary Disable”.

---

**Note:** The status LED mode will be restored to “Enable” after camera reboot when “Temporary OFF” is selected.


---

To lock camera access when it’s not used after the specified time, select “5 MIN”, “15 MIN” or “30 MIN” from the drop-down list of “Auto Lock Time”, or select “NEVER” to disable this function.

---

**Note:** When the camera access is locked after the specified time, to resume camera access, please enter the password.

---

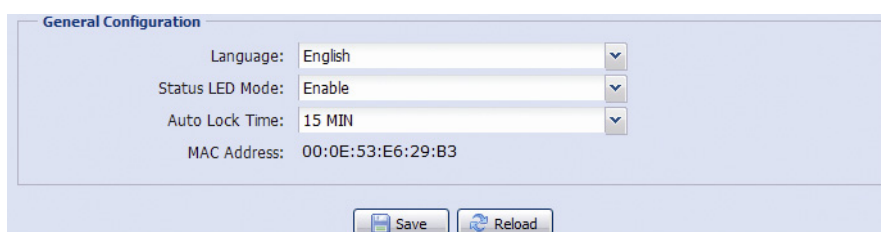

General Configuration

Language: English

Status LED Mode: Enable


Auto Lock Time: 15 MIN

MAC Address: 00:0E:53:E6:29:B3

Save Reload

### 3.7.2 Time

Set daylight saving time and the current time, and click “Save” to confirm.

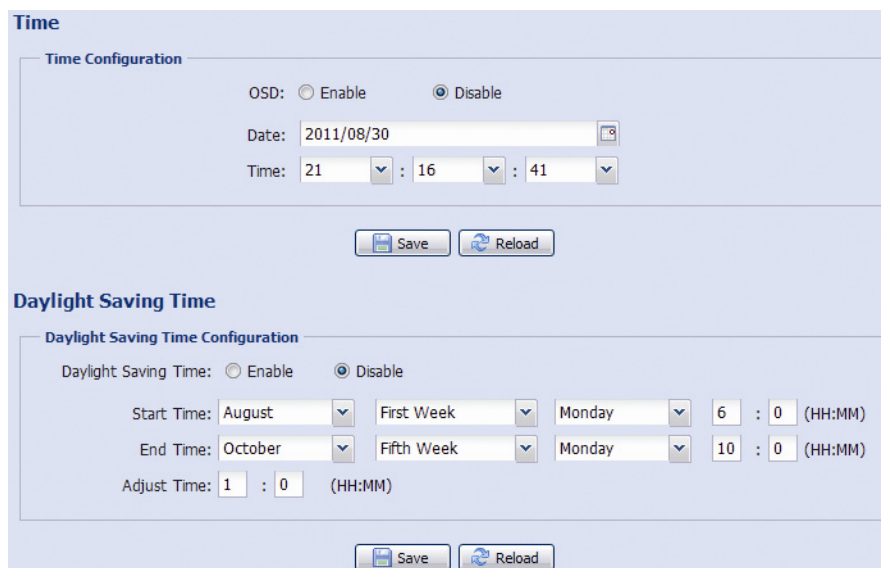

Time

Time Configuration

OSD:  Enable  Disable

Date: 2011/08/30

Time: 21 : 16 : 41

Save Reload

Daylight Saving Time

Daylight Saving Time Configuration

Daylight Saving Time:  Enable  Disable

Start Time: August First Week Monday 6 : 0 (HH:MM)

End Time: October Fifth Week Monday 10 : 0 (HH:MM)

Adjust Time: 1 : 0 (HH:MM)


Save Reload

| Function                                    | Description   |
|---|---|
| <b>■ Time Configuration</b>                 |   |
| Date  | Set the current date.   |
| Time  | Set the current time.   |
| <b>■ Daylight Saving Time Configuration</b> |   |
| Daylight Saving Time                        | Specify whether to use daylight saving time (Enable / Disable).   |
|   | If this function is enabled, set the time period (Start Time / End Time), and adjust the daylight saving time in hours (Adjust Time). |

### 3.7.3 Server Log

To quickly search the system logs you want by event type, click “Prev. Page” or “Next Page” to find the logs you want, or check the event type(s) and click “Reload” to start searching.

To clear all system event logs, click “Clear All”.

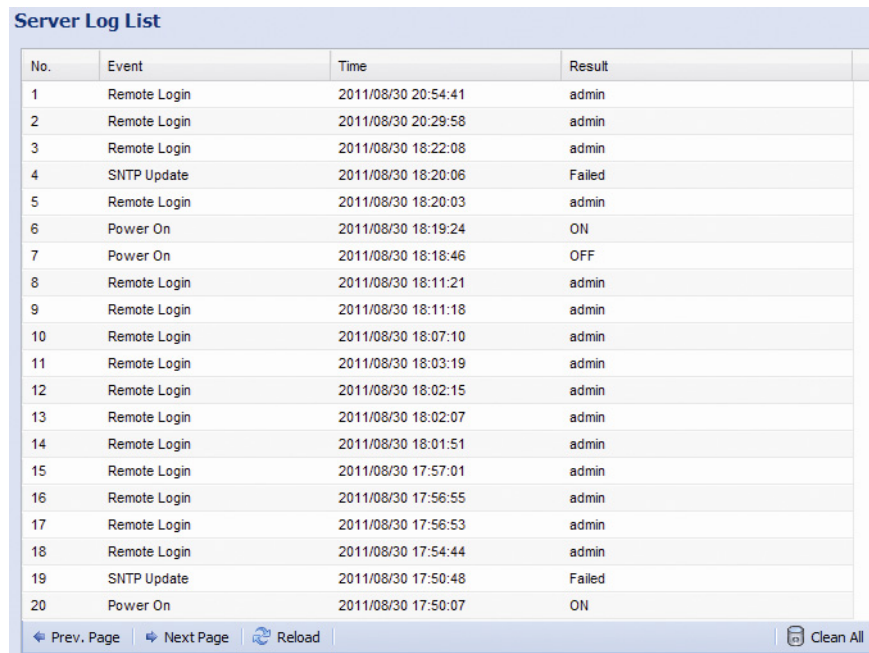


The screenshot shows a web interface titled "Server Log List". It contains a table with four columns: "No.", "Event", "Time", and "Result". The table lists 20 events, including Remote Logins, Power On/Off, and SNTP Updates. At the bottom of the table, there are navigation buttons: "Prev. Page", "Next Page", "Reload", and "Clean All".

| No. | Event        | Time                | Result |
|-----|--------------|---------------------|--------|
| 1   | Remote Login | 2011/08/30 20:54:41 | admin  |
| 2   | Remote Login | 2011/08/30 20:29:58 | admin  |
| 3   | Remote Login | 2011/08/30 18:22:08 | admin  |
| 4   | SNTP Update  | 2011/08/30 18:20:06 | Failed |
| 5   | Remote Login | 2011/08/30 18:20:03 | admin  |
| 6   | Power On     | 2011/08/30 18:19:24 | ON     |
| 7   | Power On     | 2011/08/30 18:18:46 | OFF    |
| 8   | Remote Login | 2011/08/30 18:11:21 | admin  |
| 9   | Remote Login | 2011/08/30 18:11:18 | admin  |
| 10  | Remote Login | 2011/08/30 18:07:10 | admin  |
| 11  | Remote Login | 2011/08/30 18:03:19 | admin  |
| 12  | Remote Login | 2011/08/30 18:02:15 | admin  |
| 13  | Remote Login | 2011/08/30 18:02:07 | admin  |
| 14  | Remote Login | 2011/08/30 18:01:51 | admin  |
| 15  | Remote Login | 2011/08/30 17:57:01 | admin  |
| 16  | Remote Login | 2011/08/30 17:56:55 | admin  |
| 17  | Remote Login | 2011/08/30 17:56:53 | admin  |
| 18  | Remote Login | 2011/08/30 17:54:44 | admin  |
| 19  | SNTP Update  | 2011/08/30 17:50:48 | Failed |
| 20  | Power On     | 2011/08/30 17:50:07 | ON     |

### 3.7.4 Online

You can check the current online user(s) with respective online information. To refresh the list, click “Reload”.

- To allow anonymous login, select “Enable” in “Anonymous Viewer Login”.
- To disable image code verification at login, select “No” in “Login with CAPTCHA Image”.

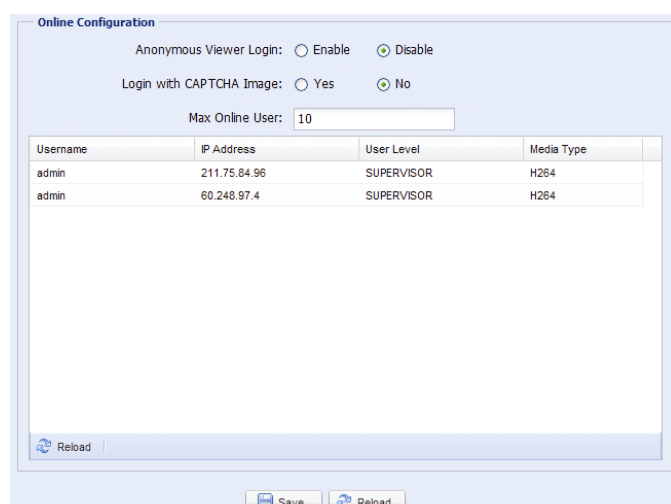

The screenshot shows a web interface titled "Online Configuration". It has two radio button options: "Anonymous Viewer Login" (with "Enable" and "Disable" options) and "Login with CAPTCHA Image" (with "Yes" and "No" options). Below these is a text input field for "Max Online User" with the value "10". There is a table with four columns: "Username", "IP Address", "User Level", and "Media Type". The table shows two rows of data for "admin" users. At the bottom, there are "Save" and "Reload" buttons.

| Username | IP Address   | User Level | Media Type |
|----------|--------------|------------|------------|
| admin    | 211.75.84.96 | SUPERVISOR | H264       |
| admin    | 60.248.97.4  | SUPERVISOR | H264       |




### 3.7.5 Account

You can create a new account with different user access privilege, or delete or modify an existing account setting.

#### How to create a new account

Step1: Click “New”, and fill in the following columns.

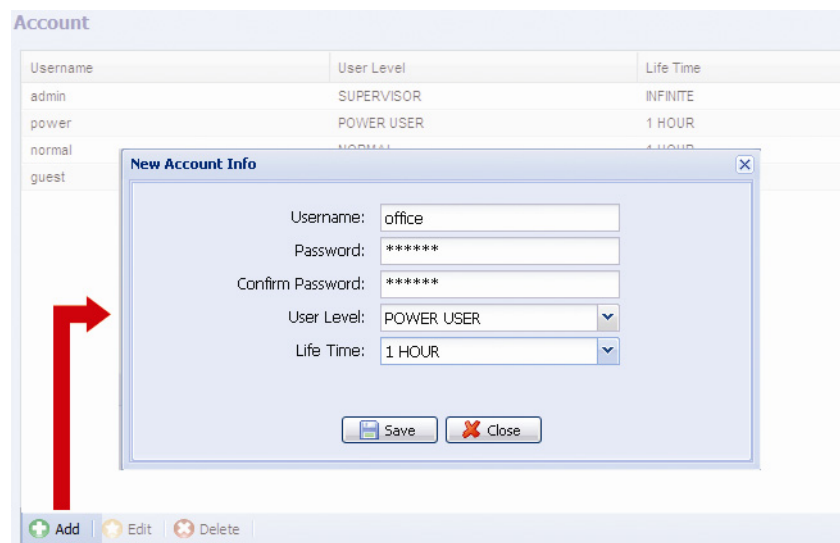

| Column           | Description  |
|------------------|--|
| User Name        | Set a user name that will be used for camera access. The user name allows up to 16 alphanumeric characters.  |
| Password         | Set the password that will be used for remote login. The password allows up to 16 alphanumeric characters.   |
| Confirm Password | Enter the password again to confirm.   |
| User Level       | Set the security level of an account to give the permission to control different functions. There are four user levels: SUPERVISOR, POWER USER, NORMAL USER and GUEST. |
| Life Time        | Select how long this account is allowed to stay online (1 MIN / 5 MIN / 10 MIN / 1 HOUR / 1 DAY / INFINITE)  |

Step2: Then, click “Save” to save your setting and create a new account.

#### How to modify or delete an existing account

Step1: Select the account you want to modify or delete.

Step2: To modify the account, click “Edit” to change the settings, and click “Save”.

To remove the account, click “Delete”.

---

**Note:** It’s not allowed to remove an account when there’s only one account in the account list.

---

### 3.7.6 Maintenance

#### Firmware Upgrade

This function is used when users need to upgrade the camera for function scalability.

---

**Note:** Before using this function, make sure you have the correct upgrade files provided by your installer or distributor.


---




---

**Note:** The event videos saved in the camera will be removed after firmware upgrade. Make sure you’ve copied important events to your PC before firmware upgrade.

---

Step1: Select “” to browse to where you save the upgrade files, and select them one by one until all files are selected (up to four files).

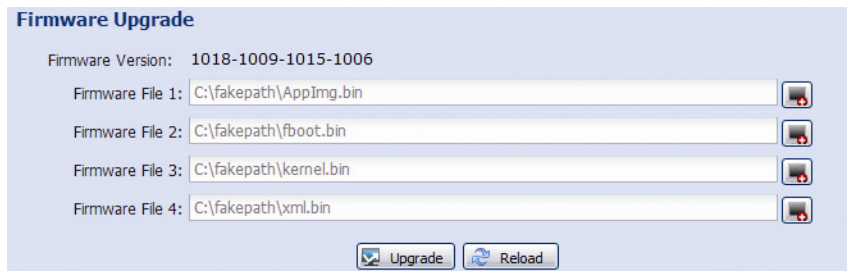

Step2: Select “Upgrade” to start system upgrading.

---

**Note:** You’ll be prompted to keep current configurations. It’s recommended to keep them, or all configurations will be restored to default values after upgrade.

---

---

**Note:** It takes a few minutes to finish the upgrade process. Do not disconnect the power during firmware upgrade, or the upgrade may be failed. The camera will reboot after the upgrade.


---

### System Configuration Backup

 This function is used to copy your system configuration to a “System.bin” file.


You may import the same system configuration to another camera, or restore your system configuration when the camera is reset to default values.

Select “System.bin” in “Firmware Upgrade”, and select “Upgrade” to import the system configuration.

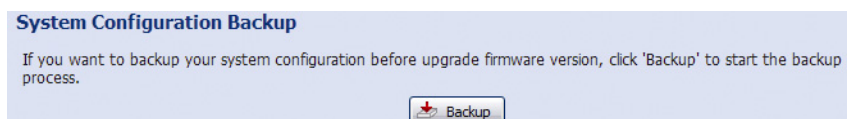


### System Reboot

 Select “Reboot” to restart your camera if needed.

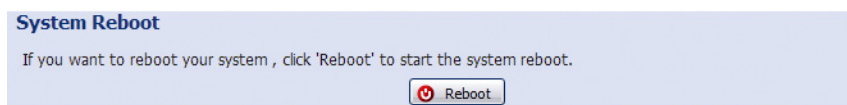

### Player Download

 To see the event video clips downloaded to your PC, you need to first install our own video player in your PC. Select “Free Download” to download the video player, and double click the file to install it.

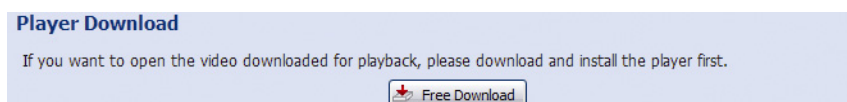

# APPENDIX 1 PRODUCT SPECIFICATIONS

## ➤ 1.3 MP Models

|                                   | Model 1   | Model 2  | Model 3 |
|-----------------------------------|---|--|---------|
| <b>■ Network</b>                  |   |  |         |
| LAN Port                          | YES   |  |         |
| LAN Speed                         | 10/100 Based-T Ethernet   |  |         |
| Wireless Interface                | IEEE 802.11b/g/n  | --   |         |
| Antenna Gain                      | 2dBi  | --   |         |
| RF Connector                      | Reverse SMA Plug  | --   |         |
| Supported Protocols               | DDNS, PPPoE, DHCP, NTP, SNTP, TCP/IP, ICMP, SMTP, FTP, HTTP, RTP, RTSP, RTCP, IPv4, Bonjour, UPnP, DNS, UDP, IGMP, QoS  |  |         |
| Number of Online Users            | 10  |  |         |
| Security                          | (1) Multiple user access levels with password<br>(2) IP address filtering<br>(3) WEP 64/128 bit, WPA/WPA2-PSK   | (1) Multiple user access levels with password<br>(2) IP address filtering<br>(3) Digest authentication |         |
| Remote Access                     | (1) Internet Explorer on Windows operating system<br>(2) EagleEyes on iOS & Android mobile devices  |  |         |
| <b>■ Video</b>                    |   |  |         |
| Video Compression                 | H.264 / MPEG4 / MJPEG   |  |         |
| Video Resolution                  | SXGA, 720P, VGA, QVGA   |  |         |
| Frame Rate                        | 30fps   |  |         |
| Multiple Video Streaming          | YES   |  |         |
| <b>■ General</b>                  |   |  |         |
| Image Sensor                      | 1/4" SONY H.R. image sensor   |  |         |
| Min Illumination                  | 0.1 Lux / F1.5,<br>0 Lux (White LED on)   | 0.1 Lux / F1.5   |         |
| Shutter Speed                     | 1 / 2 to 1 / 10,000 sec.  |  |         |
| S/N Ratio                         | More than 48dB (AGC off)  |  |         |
| Lens                              | f3.8mm / F1.5   |  |         |
| Viewing Angle                     | 53.7° (Horizontal) / 34.1° (Vertical) / 62.7° (Diagonal)  |  |         |
| White LED                         | YES (1W, 10 meters)   | --   |         |
| PIR Sensor                        | Detection Range 76° wide angle with up to 6m long distance at 2m height (under 30°C)  |  |         |
| White Balance                     | ATW   |  |         |
| AGC                               | Auto  |  |         |
| IRIS Mode                         | AES   |  |         |
| External Alarm I/O                | YES   |  |         |
| Micro SD Card Slot                | YES   | --   |         |
| Operating Temperature             | 0°C ~ 40°C  |  |         |
| Power Source (±10%)               | 12V / 1A  | 5V / 2A  |         |
| <b>■ Audio</b>                    |   |  |         |
| Microphone built-in               | YES   |  |         |
| Speaker built-in                  | YES   | --   |         |
| <b>■ Others</b>                   |   |  |         |
| EaZy Networking                   | YES   |  |         |
| Push Video                        | YES   |  |         |
| Mobile Surveillance               | iOS & Android mobile device   |  |         |
| Quick Wireless Network Connection | YES (With one press)  | --   |         |
| Event Notification                | FTP / Email / Push Video  |  |         |
| RTC (real-time clock)             | YES   |  |         |
| Motion Detection                  | YES   |  |         |
| Digital Pan / Tilt / Zoom         | YES   |  |         |
| Minimum Web Browsing Requirements | <ul style="list-style-type: none"> <li>• Intel core i3 or higher, or equivalent AMD</li> <li>• 2G RAM</li> <li>• AGP graphics card, Direct Draw, 32MB RAM</li> <li>• Windows 7, Vista &amp; XP, DirectX 9.0 or later</li> <li>• Internet Explorer 7.x or later</li> </ul> |  |         |

## ➤ D1 Models

|                                   | Model 4   | Model 5 | Model 6   |
|-----------------------------------|---|---------|-----------|
| <b>■ Network</b>                  |   |         |           |
| LAN Port                          | YES   |         |           |
| LAN Speed                         | 10/100 Based-T Ethernet   |         |           |
| Supported Protocols               | DDNS, PPPoE, DHCP, NTP, SNTP, TCP/IP, ICMP, SMTP, FTP, HTTP, RTP, RTSP, RTCP, IPv4, Bonjour, UPnP, DNS, UDP, IGMP, QoS  |         |           |
| Number of Online Users            | 10  |         |           |
| Security                          | (1) Multiple user access levels with password<br>(2) IP address filtering<br>(3) Digest authentication  |         |           |
| Remote Access                     | (1) Internet Explorer on Windows operating system<br>(2) EagleEyes on iOS & Android mobile devices  |         |           |
| <b>■ Video</b>                    |   |         |           |
| Video Compression                 | H.264 / MPEG4 / MJPEG   |         |           |
| Video Resolution                  | D1 / CIF  |         |           |
| Frame Rate                        | 30fps   |         |           |
| Multiple Video Streaming          | YES   |         |           |
| <b>■ General</b>                  |   |         |           |
| Image Sensor                      | 1/3" image sensor   |         |           |
| Min Illumination                  | 0.25 Lux / F2.0   |         |           |
| Shutter Speed                     | 1/60 (1/50) to 1 / 900,000 sec.   |         |           |
| S/N Ratio                         | More than 48dB (AGC off)  |         |           |
| Lens                              | f3.6mm / F2.0   |         |           |
| Viewing Angle                     | 69° (Horizontal) / 53° (Vertical) / 90° (Diagonal)  |         |           |
| PIR Sensor                        | Detection Range 76° wide angle with up to 6m long distance at 2m height (under 30°C)  |         |           |
| White Balance                     | ATW   |         |           |
| AGC                               | Auto  |         |           |
| IRIS Mode                         | AES   |         |           |
| External Alarm I/O                | YES   |         |           |
| Micro SD Card Slot                | YES   |         | --        |
| Operating Temperature             | 0°C ~40°C   |         |           |
| Power Source (±10%)               | 12V / 1A  |         | 5V / 0.5A |
| <b>■ Audio</b>                    |   |         |           |
| Microphone built-in               | YES   |         |           |
| <b>■ Others</b>                   |   |         |           |
| EaZy Networking                   | YES   |         |           |
| Push Video                        | YES   |         |           |
| Mobile Surveillance               | iOS & Android mobile devices  |         |           |
| Event Notification                | FTP / Email / Push Video  |         |           |
| RTC (real-time clock)             | YES   |         |           |
| Motion Detection                  | YES   |         |           |
| Minimum Web Browsing Requirements | <ul style="list-style-type: none"> <li>• Intel core i3 or higher, or equivalent AMD</li> <li>• 2G RAM</li> <li>• AGP graphics card, Direct Draw, 32MB RAM</li> <li>• Windows 7, Vista &amp; XP, DirectX 9.0 or later</li> <li>• Internet Explorer 7.x or later</li> </ul> |         |           |

\*\* The specifications are subject to change without notice.

\*\* Dimensional tolerance: ± 5mm

# APPENDIX 2 BIT RATE TABLE FOR REFERENCE


The data below is for reference only.

The bit rates listed here may vary depending on the resolution, image quality & frame rate you choose, the complexity of your monitoring area, and how often the moving objects show in your monitoring area.

## ➤ 1.3 MP Model

### Testing Environment

- Place: Office Entrance
- Network translation: H.264
- Camera type: Megapixel camera

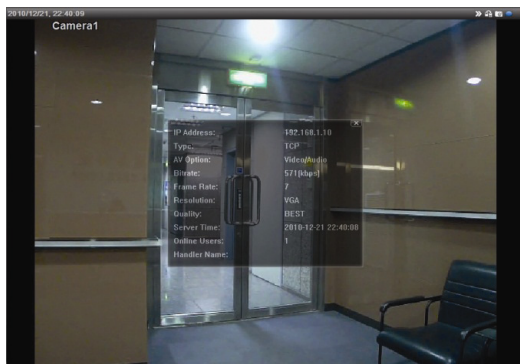

*Static: No one coming in and out*



*Dynamic: One or two people coming in and out*

| Resolution | Quality | Frame Rate | (Dynamic) kbps | (Static) kbps |      |
|------------|---------|------------|----------------|---------------|------|
| SXGA       | Best    | FULL       | 3253           | 3216          |      |
|            | High    |            | 2375           | 2160          |      |
|            | Normal  |            | 1571           | 1266          |      |
|            | Basic   |            | 1465           | 873           |      |
| VGA        | Best    |            | 2010           | 1261          |      |
|            | High    |            | 1042           | 1034          |      |
|            | Normal  |            | 685            | 572           |      |
|            | Basic   |            | 457            | 350           |      |
| QVGA       | Best    |            | 646            | 366           |      |
|            | High    |            | 482            | 350           |      |
|            | Normal  |            | 302            | 286           |      |
|            | Basic   |            | 168            | 161           |      |
| SXGA       | Best    |            | 1/4            | 1163          | 1076 |
|            | High    |            |                | 989           | 715  |
|            | Normal  |            |                | 855           | 534  |
|            | Basic   |            |                | 719           | 443  |
| VGA        | Best    | 789        |                | 571           |      |
|            | High    | 451        |                | 447           |      |
|            | Normal  | 349        |                | 237           |      |
|            | Basic   | 217        |                | 165           |      |
| QVGA       | Best    | 269        |                | 147           |      |
|            | High    | 182        |                | 131           |      |
|            | Normal  | 164        |                | 113           |      |
|            | Basic   | 97         |                | 71            |      |

| <b>Resolution</b> | <b>Quality</b> | <b>Frame Rate</b> | <b>(Dynamic) kbps</b> | <b>(Static) kbps</b> |
|-------------------|----------------|-------------------|-----------------------|----------------------|
| SXGA              | Best           | 1/15              | 581                   | 374                  |
|                   | High           |                   | 405                   | 342                  |
|                   | Normal         |                   | 487                   | 248                  |
|                   | Basic          |                   | 337                   | 141                  |
| VGA               | Best           |                   | 358                   | 79                   |
|                   | High           |                   | 201                   | 63                   |
|                   | Normal         |                   | 180                   | 28                   |
|                   | Basic          |                   | 92                    | 15                   |
| QVGA              | Best           |                   | 111                   | 84                   |
|                   | High           |                   | 99                    | 68                   |
|                   | Normal         |                   | 97                    | 54                   |
|                   | Basic          |                   | 58                    | 42                   |


## ➤ D1 Model

### Testing Environment

- Place: Office Entrance
- Network translation: H.264



*Static: No one coming in and out*

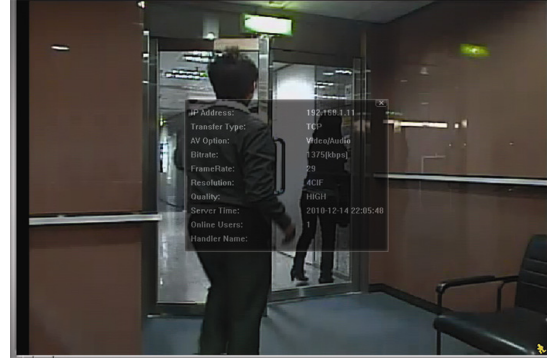


*Dynamic: One or two people coming in and out*

| Resolution | Quality | Frame Rate | (Dynamic) kbps | (Static) kbps |
|------------|---------|------------|----------------|---------------|
| D1         | Best    | FULL       | 2786           | 1546          |
|            | High    |            | 1375           | 705           |
|            | Normal  |            | 1234           | 425           |
|            | Basic   |            | 441            | 245           |
| CIF        | Best    |            | 955            | 290           |
|            | High    |            | 364            | 171           |
|            | Normal  |            | 328            | 111           |
|            | Basic   |            | 161            | 68            |
| D1         | Best    | 1/5        | 935            | 474           |
|            | High    |            | 506            | 272           |
|            | Normal  |            | 297            | 175           |
|            | Basic   |            | 223            | 108           |
| CIF        | Best    |            | 222            | 109           |
|            | High    |            | 133            | 67            |
|            | Normal  |            | 81             | 49            |
|            | Basic   |            | 71             | 32            |
| D1         | Best    | 1/30       | 127            | 70            |
|            | High    |            | 197            | 20            |
|            | Normal  |            | 61             | 11            |
|            | Basic   |            | 50             | 4             |
| CIF        | Best    |            | 42             | 7             |
|            | High    |            | 38             | 2             |
|            | Normal  |            | 22             | 1             |
|            | Basic   |            | 28             | 0             |

## APPENDIX 3 Q&A

For more details about EagleEyes Q&A, please visit our official website: [www.eagleeyesctv.com](http://www.eagleeyesctv.com).

| Question  | Answer   |
|---|--|
| My live images are not fluent. Why?   | <p>There are two suggestions to improve the image fluency as listed below:</p> <ol style="list-style-type: none"> <li>1) Image fluency is affected by the local network upload bandwidth, router efficiency, client network download bandwidth, complexity of live view, and more. (Recommended) To have the best image fluency, select "QVGA"; to have the best image quality, select "SXVGA"; to have normal image fluency and quality, select "VGA"</li> <li>2) For wireless models, IEEE 802.11b/g/n interface is supported. When in b Mode, delayed live view may be caused if two people or more log into the camera at the same time. In this case, it's recommended to switch to the other modes (g mode / n mode).</li> </ol> |
| What's "Push Video"?  | <p>"Push Video" is an active notification system, different from traditional FTP &amp; Email notification methods.</p> <p>When "Push Video" is enabled and any human detection event occurs, you'll be able to receive notifications on your iPhone / iPad / Android mobile device within 5 seconds.</p>   |
| The detection range of the built-in human detection sensor seems too short and the sensor is not sensitive enough. Did I do anything wrong on installation? | <p>The human detection sensor might be influenced by the temperature of ambient environment and human beings, and the applicable working temperature is up to 30°C. To get more accurate and precise detection, you may connect external alarm devices, such as magnetic contacts.</p>   |
| The live video keeps flickering. Why?   | <p>Please try adjusting the power line frequency to "60 Hz" or "50 Hz" for the camera.</p> <p>For iPhone / iPad users, access the camera, and select  on the top right corner to enter IPCAM Configuration page. Then, scroll down and select "Advanced". Go to "Advanced Setup" → "Camera" to change setting.</p> <p>For access from Internet Explorer, log into the camera, and select "Config." → "Camera" → "Camera".</p>   |
| If I want to extend the power cable for my camera, is there anything I have to pay special attention to?  | <p>Yes, please notice that power supplies can have an impact on the performance and accuracy of PIR sensor built in the camera. Hence, if you want to extend the power cable of the supplied adapter to 20 meters or longer, it's recommended to pair the adapter with extension cords, to ensure the PIR sensor works properly. On the other hand, if you want to make a new and longer power cable for the supplied adapter, make sure power supply maintains 5V output when camera plugged in, otherwise, false alarms generated by PIR sensor will increase.</p>   |



## APPENDIX 4 RECORDING TIME TABLE

Below shows the estimated total recording time for each recording resolution.

The recording time per resolution is the average value collected from the both alarm trigger conditions indicated in “Testing Environment”, and is for reference only.

The time may vary depending on the resolution, image quality & frame rate you choose, the complexity of your monitoring area, and how often the moving objects show in your monitoring area.

### **Testing Environment**

- Place: Office
- Monitoring area: 1.5 meters away from the camera
- Alarm trigger conditions:
  - (1) One person walks by the monitoring area and leaves immediately.
  - (2) Two persons walk by the monitoring area. One goes away immediately, and the other one stays a while and goes away.

| Recording Resolution    | SXGA | VGA | QVGA |
|-------------------------|------|-----|------|
| Recording time (second) | 25   | 115 | 211  |

## APPENDIX 5 MICRO SD CARD COMPATIBLE LIST

| Manufacturer | Capacity | Class    | Manufacturer | Capacity | Class    |
|--------------|----------|----------|--------------|----------|----------|
| ADATA        | 2GB      | --       | Transcend    | 2GB      | --       |
|              | 4GB      | Class 6  |              | 4GB      | Class 2  |
| Apacer       | 2GB      | --       |              | 4GB      | Class 4  |
|              | 4GB      | Class 4  |              | 4GB      | Class 6  |
| SanDisk      | 2GB      | --       |              | 8GB      | Class 6  |
|              | 4GB      | Class 4  |              | 16GB     | Class 10 |
|              | 8GB      | Class 4  | Kingston     | 2GB      | --       |
|              | 16GB     | Class 4  |              | 4GB      | Class 4  |
|              | 32GB     | Class 4  |              | 8GB      | Class 4  |
| Verico       | 2GB      | --       |              | 32GB     | Class 4  |
|              | 4GB      | Class 4  | TOSHIBA      | 16GB     | Class 4  |
|              | 16GB     | Class 10 | TOPRAM       | 32GB     | Class 10 |